TRW-24HP-N RF MODULE

Wireless 2.4GHz 500mW Transceiver RF Module



Version History

Version	Date	Changes
V1.0	Feb. 22, 2012	1 ^{st.} Edition

WENSHING **TRW-24HP-N** wireless 2.4GHz high power transceiver RF module is designed, developed and manufactured as contemplated for general use, without limitation, ordinary industrial use, general office use, personal use, and household use, but is not designed, developed and manufactured as contemplated

- (1) For use accompanying fatal risks or dangers that, unless extremely high safety is secured, could have a serious effect to the public, and could lead directly to death, personal injury, severe physical damage or other loss (i.e., nuclear reaction control in nuclear facility, aircraft flight control, air traffic control, mass transport control, medical life support system, missile launch control in weapon system).
- (2) For use requiring extremely high reliability (i.e., submersible repeater and artificial satellite).

You shall not use this product for the above-mentioned using.

If your equipment is likely to be used for the above-mentioned uses, please consult with our sales representative before using.

WENSHING Component Division shall not be liable against you and/or any third party for any claims or damages arising

in connection with the above-mentioned uses of this product.

Function Introduction

- TRW-24HP-N wireless 2.4GHz High power transceiver RF module is a frequency agile, half duplex.
- Transceiver is with SPI bus interface.
- Direct microprocessor
- Connection for control and data transfer eliminates.
- Needs for additional ICs, while integrated data code/decode hardware.
- Reduces the instruction set requirements on the associated microprocessor.
- Adjustable data rate, filter bandwidths and detection.
- Levels allow the IC to be used in a wide variety of high sensitivity/ High EMI environments. The TRW-24HP-N is ideally suitable for use in battery powered wireless applications in conjunction with Microprocessors for data communication.

Application


- Security System
- 2.4 GHz Cordless Phones
- Wireless Remote Control Car
- Wireless Remote Control Robot
- Automatic Power Switch Control
- Wireless Modem

Specification

- Frequency Range: 2.400GHz~2.4835GHz
- GFSK modulation
- Output Power: 23±1dbm (5V)
- Data Rates: from 1 to 2M bits/Sec
- Low Working Voltage: 3.7V~5.5V
- Input sensitivity: -95dBm(1MBPS)
- 3 separate 32 bytes TX and RX FIFOs
- Automatic Packet Handling
- RF Channels: 126
- Built-in Antenna connector
- RoHS Compliant


Dovomotov	Specification			Unit	Condition	
Parameter	Min	Type	Max	Onit	Condition	
Frequency Range	2.4		2.4835	GHz		
Receiver Sensitivity	-98		-91	dBm	1Mbps	
Data Rate	1		2	M Bit	GFSK	
Supply Voltage, VDD	3.7		5.5	V	DC	
TX Current		300		mA		
RX Current				mA		
Power down Current		1		uA	Power down Mode	
standby-I mode Current		26		uA	standby-I mode	
standby-II mode Current		360		uA	standby-II mode	
Disable Current				uA	Enable PIN is LO	
Power up time			100	ms	Disable to Enable time	
Operating Temperature	-20		+70	°C		

Internal Block Diagram

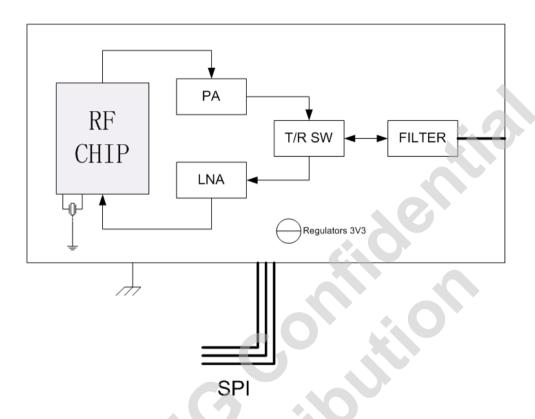


Absolute maximum ratings

Minimum	Maximum	Units	Operating conditions
Supply voltages			
-0.3	5.2	V	VDD
	0	V	GND
nput voltage			
-0.3	3.6	V	VI(DATA IN)
Output voltage		•	
GND TO 3	GND TO 3.3	V	VO

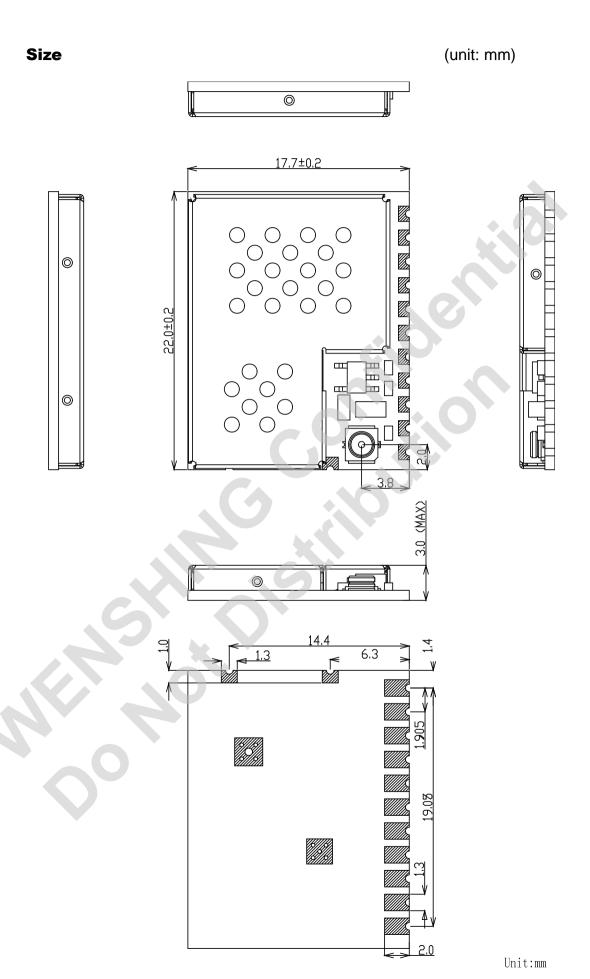

Pin Assignment

Pin	Name	I/O	Description
1	Antenna	I/O	RF output to the antenna
2	VDD	POWER	Power Supply 3.7~5.5V
3	VDD	POWER	Power Supply 3.7~5.5V
4	GND	Ground	Ground
5	GND	Ground	Ground
6	ENABLE	I	Full power down 0 = full power down mode 1 = normal mode
7	CE	I	Chip Enable Activates RX or TX mode
8	CNS	I	SPI Chip Select
9	SCK	I	SPI Clock
10	MOSI	I	SPI Slave Data Input
11	MISO	0	SPI Slave Data Output
12	IRQ	0	Mask able interrupt pin. Active low
13	RF GND		RF Ground

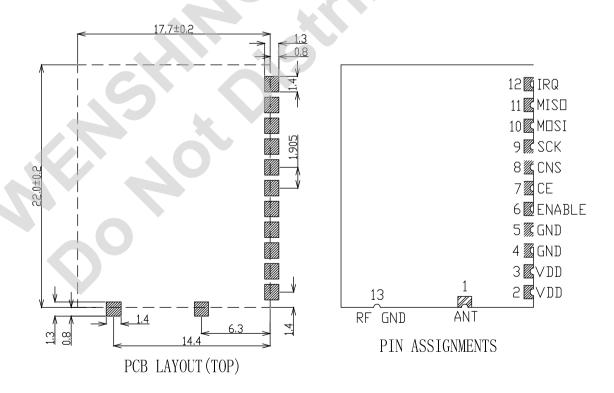

Power Management

TRW-24HP-N has a IC regulator, external input power supply can be 3.7~5.5V input. When ENABLE Pin is on OL, module will not waste power. SPI interface can also declare a few powers saving mode:

Power down Mode

Communicating thought SPI interface set PWR_UP REGISTER BIT to 0 in the module.

• Standby -I Mode

When set PWR_UP REGISTER BIT to 1, it enters Standby Mode. At the moment, the module's Crystal oscillation and wait for the next commend. This can shorten RF's start-up time during operation.


Standby –II Mode

After setting PWR_UP REGISTER BIT to 1, Set Module's CE PIN to high potential. At the moment, FIFO data start to transmit, Module's PLL starts operating.


SPI Communication

When MCU read REGISTER from RF Module, the diagram below is timing diagram. The first few bits are LO during read, because REGISTE address is not over 32. The writ method: When MCU is writing to RF Module, the fifth bit must be 1 to allow write.

SPI Read Timing diagram

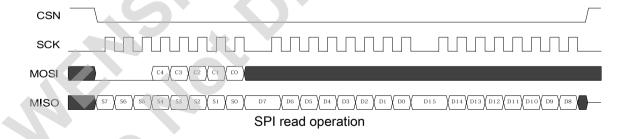

SPI Write Timing diagram

 

SPI write operation

REGISTER Description

Note: Register address 18H to 1BH is module testing sample, please to not use.

Address			Reset	Read/Write	ing sample,please to not use.				
(Hex)	Flag	Bit	State	Туре	Note 1 (REGISTER 8 bit)				
(IICA)	Function required t	to set mos	ļ.		ecording to MCII				
	Reserved	7	0	R/W	Only '0' allowed.				
	Kesel ved	/	0	IX/ VV	Mask interrupt caused by RX_DR				
					1: Interrupt not reflected on the IRQ pin				
	MASK_RX_DR	6	0	R/W	0: Reflect RX_DR as active low interrupt				
					on the IRQ pin.				
					Mask interrupt caused by TX_DS				
	MASK_TX_DS	5	0	R/W	1: Interrupt not reflected on the IRQ pin				
					0: Reflect TX_DS as active low interrupt on				
					the IRQ pin.				
00					Mask interrupt caused by MAX_RT 1: Interrupt not reflected on the IRQ pin				
	MASK_MAX_RT	4	0	R/W	0: Reflect MAX_RT as active low interrupt				
					on the IRQ pin.				
	EN CDC	3	0	R/W	Enable CRC. Forced high if one of the bits				
	EN_CRC				in the EN_AA is high.				
			0		CRC encoding scheme				
	CRCO	2		R/W	'0' - 1 byte				
	DAMP TAP	1	→ C	D WI	'1' – 2 bytes				
	PWR_UP	1	0	R/W	1: POWER UP, 0:POWER DOWN				
	PRIM_RX	0	0	R/W	RX/TX control 1: PRX, 0: PTX				
	Enable 'Auto Acknow	vledgment	' Function	n Disable	1. FRA, U. FTA				
	Enable 'Auto Acknowledgment' Function Disable this functionality to be compatible with nRF2401, see Note1								
	Reserved	7:6	00	R/W	Only '00' allowed.				
	ENAA_P5	5	1	R/W	Enable auto acknowledgement data pipe 5				
01	ENAA_P4	4	1	R/W	Enable auto acknowledgement data pipe 4				
	ENAA_P3	3	1	R/W	Enable auto acknowledgement data pipe 3				
	ENAA_P2	2	1	R/W	Enable auto acknowledgement data pipe 2				
	ENAA_P1	1	1	R/W	Enable auto acknowledgement data pipe 1				
	ENAA_P0	0	1	R/W	Enable auto acknowledgement data pipe 0				
02	EN_RXADDR	Enabled 1	RX Addre	sses					
02	Reserved	7:6	00	R/W	Only '00' allowed.				

			1							
	ERX_P5	5	0	R/W	Enable data pipe 5					
	ERX_P4	4	0	R/W	Enable data pipe 4					
	ERX_P3	3	0	R/W	Enable data pipe 3					
	ERX_P2	2	0	R/W	Enable data pipe 2					
	ERX_P1	1	1	R/W	Enable data pipe 1					
	ERX_P4	0	1	R/W	Enable data pipe 0					
	Reserved	7:2	000000	R/W	Only '000000' allowed.					
					RX/TX Address field width					
03					'00' - Illegal					
0.5					'01' - 3 bytes					
	AW	1:0	11	R/W	'10' - 4 bytes					
	· ·	1.0			'11' – 5 bytes					
					LSByte is used if address width is below 5					
					bytes.					
	SETUP_RETR Setup of Automatic Retransmission									
					Auto Retransmit Delay					
					'0000' – Wait 250μS					
		7:4		R/W	'0001' – Wait 500μS					
	ARD		0000		'0010' – Wait 750μS					
					'1111' – Wait 4000μS					
04					(Delay defined from end of transmission to					
04					start of next transmission).					
			A 6		Auto Retransmit Count					
					'0000' –Re-Transmit disabled					
	ARC	3:0	0011	R/W	'0001' – Up to 1 Re-Transmit on fail of					
					AA					
					'1111' – Up to 15 Re-Transmit on fail of AA					
	RF_CH RF Ch	annel								
05	Reserved	7	0		Only '0' allowed.					
	RF_CH	6:0	0000010	R/W	Sets the frequency channel nRF24L01					
	141 - 611	0.0	0000010	10 //	operates on.					
	RF_SETUP RI	Setup Re	egister							
	Reserved	7:5	000	R/W	Only '000' allowed.					
	PLL_LOCK	4	0	R/W	Force PLL lock signal. Only used in test.					
06					Air Data Rate					
	RF_DR	3	1	R/W	'0' – 1Mbps					
					'1' – 2Mbps					
					Set RF output power in TX mode					
	RF_PWR	2:1	11	R/W	'00' – -18dBm					
					OU TOUDIN					

					1041 42 17
					'01' – -12dBm
					'10' – -6dBm
					'11' – 0dBm
	LNA_HCURR	0	1	R/W	Setup LNA gain
	STATUS Status Register (In pregister is shifted seri				ord applied on the MOSI pin, the STATUS
	Reserved	7	0	R/W	Only '0' allowed.
					Data Ready RX FIFO interrupt. Asserted
	RX_DR	6	0	R/W	when new data arrives RX FIFOb.
					Write 1 to clear bit.
					Data Sent TX FIFO interrupt. Asserted when packet transmitted on TX. If
	TX_DS	5	0	R/W	AUTO_ACK is activated, this bit is set high
	_ "				only when ACK is received.
07					Write 1 to clear bit.
					Maximum number of TX retransmits
	MAX_RT	4	0	R/W	interrupt Write 1 to clear bit. If MAX_RT is
					asserted it must be cleared to enable further
					communication.
	RX_P_NO	3:1	111	R	Data pipe number for the payload available for reading from RX_FIFO 000-101: Data
					Pipe Number 110: Not Used 111: RX FIFO
					Empty.
		0	0	R	TX FIFO full flag.
	TX_FULL				1: TX FIFO full.
					0: Available locations in TX FIFO.
	OBSERVE_TX	Transmi	t observe	register	
					Count lost packets. The counter is overflow
	PLOS_CNT	7:4	0	R	protected to 15, and discontinues at max
08			Ü		until reset. The counter is reset by writing to
					RF_CH.
	ARC_CNT	3:0	0	R	Count retransmitted packets. The counter is reset when transmission of a new packet
			U	K	starts.
	CD				otario.
					device does not succeed to get packets
					through, as indicated by the MAX_RT IRQ
09		7:1			for single packets and by the packet loss
	Reserved		000000	R	counter (PLOS_CNT) if several packets are
					lost. If the PLOS_CNT in the PTX device
					indicates a high rate of packet losses, the
					device can be configured to a PRX device


					for a short time (Tstbt2a +CD-filter delay = 130μs+128μs = 258μs) to check CD. If CD
					was high (jam situation), the frequency
					channel should be changed. If CD was low
					(out of range or jammed by broadband
					signals like WLAN), it may continue on the
					same frequency channel, but you must
					perform other adjustments (a dummy write
					to the RF_CH clears the PLOS_CNT)
	CD	0	0		
					Receive address data pipe 0. 5 Bytes
0A	RX_ADDR_P0	39:0	0xE7E7E	R/W	maximum length. (LSByte is written first.
UA	ICA_ADDR_I 0	37.0	7E7E7	10/ 11	Write the number of bytes defined by
					SETUP_AW)
			0xC2C2		Receive address data pipe 1. 5 Bytes
0В	RX_ADDR_P1	39:0	C	R/W	maximum length. (LSByte is written first.
02			2C2C2		Write the number of bytes defined by
					SETUP_AW)
0C	RX_ADDR_P2	7:0	0xC3	R/W	Receive address data pipe 2. Only LSB.
					MSBytes is equal to RX_ADDR_P1[39:8]
0D	RX_ADDR_P3	7:0	0xC4	R/W	Receive address data pipe 3. Only LSB.
			1-		MSBytes is equal to RX_ADDR_P1[39:8]
0E	RX_ADDR_P4	7:0	0xC5	R/W	Receive address data pipe 4. Only LSB. MSBytes is equal to RX_ADDR_P1[39:8]
					Receive address data pipe 5. Only LSB.
0F	RX_ADDR_P5	7:0	0xC6	R/W	MSBytes is equal to RX_ADDR_P1[39:8]
					Transmit address. Used for a PTX device
					only.(LSByte is written first)
			0xE7E7E		Set RX_ADDR_P0 equal to this address to
10	TX_ADDR	39:0	7E7E7	R/W	handle automatic acknowledge if this is a
					PTX device with Enhanced ShockBurst™
					enabled.
	RX_PW_P0		'		
	Reserved	7:6		R/W	Only '00' allowed.
11					Number of bytes in RX payload in data pipe
11					0 (1to 32 bytes).
	RX_PW_P0	5:0		R/W	0 Pipe not used 1 = 1 byte
					32 = 32 bytes
12	RX_PW_P1	•	<u>'</u>		
12	Reserved	7:6	00	R/W	Only '00' allowed.
	RX_PW_P1	5:0	00	R/W	Number of bytes in RX payload in data pipe
	103_1 11_1	5.0	00	17/ 44	1 (1to 32 bytes).

					0 Pipe not used
					1 = 1 byte
					32 = 32 bytes
	RX_PW_P2				
	Reserved	7:6	00	R/W	Only '00' allowed.
13	RX_PW_P2	5:0	0	R/W	Number of bytes in RX payload in data pipe 2 (1to 32 bytes). 0 Pipe not used1 = 1 byte 32 = 32 bytes
	RX_PW_P3				* 1
	Reserved	7:6	00	R/W	Only '00' allowed.
14	RX_PW_P3	5:0	0	R/W	Number of bytes in RX payload in data pipe 3 (1to 32 bytes). 0 Pipe not used 1 = 1 byte 32 = 32 bytes
	RX_PW_P4				
	Reserved	7:6	00	R/W	Only '00' allowed.
15	RX_PW_P4	5:0	0	R/W	Number of bytes in RX payload in data pipe 4 (1 to 32 bytes). 0 Pipe not used 1 = 1 byte 32 = 32 bytes
	RX_PW_P5				
	Reserved	7:6	00	R/W	Only '00' allowed.
16	RX_PW_P5	5:0	0	R/W	Number of bytes in RX payload in data pipe 5 (1to 32 bytes). 0 Pipe not used 1 = 1 byte 32 = 32 bytes
	FIFO_STATUS	FIFO St	atus Regis	ter	
	Reserved	7	0	R/W	Only '0' allowed.
17	TX_REUSE	6	0	R	Reuse last transmitted data packet if set high. The packet is repeatedly retransmitted as long as CE is high. TX_REUSE is set by the SPI command REUSE_TX_PL, and is reset by the SPI commands W_TX_PAYLOAD or FLUSH TX
	TX_FULL	5	0	R	TX FIFO full flag. 1: TX FIFO full. 0: Available locations in TX FIFO
	TX_EMPTY	4	1	R	TX FIFO empty flag 1: TX FIFO empty 0: Data in TX FIFO

	Reserved	3:2	00	R/W	Only '00' allowed.
					RX FIFO full flag
	RX_FULL	1	0	R	1: RX FIFO full
					0: Available locations in RX FIFO
					RX FIFO empty flag
	RX_EMPTY	0	1	R	1: RX FIFO empty
	-				0: Data in RX FIFO
					Written by separate SPI command ACK
					packet payload to data pipe number PPP
N/A					given in SPI command Used in RX mode
	ACK_PLDc	255:0	X	W	only Maximum three ACK packet
					payloads can be pending. Payloads with
					same PPP are handled first in first out.
					Written by separate SPI command TX data
N/A	TX_PLD				payload register 1 - 32 bytes.
		255:0	X	W	This register is implemented as a FIFO with
					three levels. Used in TX mode only.
					Read by separate SPI command RX data
N/A				R	payload register. 1 - 32 bytes.
N/A	RX_PLD	255:0	X		This register is implemented as a FIFO with
					three levels. All RX channels share the same
					FIFO
	DYNPDc Enable	e dynamic	payload le	ength	
	DYNPDc Enable Reserved	e dynamic 7:6	payload le	ength R/W	Only '00' allowed.
	Reserved	7:6	0	R/W	
					Only '00' allowed.
	Reserved DPL_P5	7:6	0	R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5.
1C	Reserved	7:6	0	R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5)
1C	Reserved DPL_P5 DPL_P4	7:6	0 0	R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5) Enable dyn. payload length data pipe 4.
1C	Reserved DPL_P5	7:6	0	R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5) Enable dyn. payload length data pipe 4. (Requires EN_DPL and ENAA_P4)
1C	Reserved DPL_P5 DPL_P4 DPL_P3	7:6 5 4 3	0 0 0	R/W R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5) Enable dyn. payload length data pipe 4. (Requires EN_DPL and ENAA_P4) Enable dyn. payload length data pipe 3.
1C	Reserved DPL_P5 DPL_P4	7:6	0 0	R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5) Enable dyn. payload length data pipe 4. (Requires EN_DPL and ENAA_P4) Enable dyn. payload length data pipe 3. (Requires EN_DPL and ENAA_P3)
1C	Reserved DPL_P5 DPL_P4 DPL_P3 DPL_P2	7:6 5 4 3 2	0 0 0	R/W R/W R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5) Enable dyn. payload length data pipe 4. (Requires EN_DPL and ENAA_P4) Enable dyn. payload length data pipe 3. (Requires EN_DPL and ENAA_P3) Enable dyn. payload length data pipe 2.
1C	Reserved DPL_P5 DPL_P4 DPL_P3	7:6 5 4 3	0 0 0	R/W R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5) Enable dyn. payload length data pipe 4. (Requires EN_DPL and ENAA_P4) Enable dyn. payload length data pipe 3. (Requires EN_DPL and ENAA_P3) Enable dyn. payload length data pipe 2. (Requires EN_DPL and ENAA_P2)
1C	Reserved DPL_P5 DPL_P4 DPL_P3 DPL_P2 DPL_P1	7:6 5 4 3 2	0 0 0 0	R/W R/W R/W R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5) Enable dyn. payload length data pipe 4. (Requires EN_DPL and ENAA_P4) Enable dyn. payload length data pipe 3. (Requires EN_DPL and ENAA_P3) Enable dyn. payload length data pipe 2. (Requires EN_DPL and ENAA_P2) Enable dyn. payload length data pipe 1.
1C	Reserved DPL_P5 DPL_P4 DPL_P3 DPL_P2	7:6 5 4 3 2	0 0 0	R/W R/W R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5) Enable dyn. payload length data pipe 4. (Requires EN_DPL and ENAA_P4) Enable dyn. payload length data pipe 3. (Requires EN_DPL and ENAA_P3) Enable dyn. payload length data pipe 2. (Requires EN_DPL and ENAA_P2) Enable dyn. payload length data pipe 1. (Requires EN_DPL and ENAA_P1)
1C	Reserved DPL_P5 DPL_P4 DPL_P3 DPL_P2 DPL_P1 DPL_P0	7:6 5 4 3 2	0 0 0 0 0	R/W R/W R/W R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5) Enable dyn. payload length data pipe 4. (Requires EN_DPL and ENAA_P4) Enable dyn. payload length data pipe 3. (Requires EN_DPL and ENAA_P3) Enable dyn. payload length data pipe 2. (Requires EN_DPL and ENAA_P2) Enable dyn. payload length data pipe 1. (Requires EN_DPL and ENAA_P1) Enable dyn. payload length data pipe 0.
1C	Reserved DPL_P5 DPL_P4 DPL_P3 DPL_P2 DPL_P1 DPL_P0	7:6 5 4 3 2 1 0	0 0 0 0 0	R/W R/W R/W R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5) Enable dyn. payload length data pipe 4. (Requires EN_DPL and ENAA_P4) Enable dyn. payload length data pipe 3. (Requires EN_DPL and ENAA_P3) Enable dyn. payload length data pipe 2. (Requires EN_DPL and ENAA_P2) Enable dyn. payload length data pipe 1. (Requires EN_DPL and ENAA_P1) Enable dyn. payload length data pipe 0.
	Reserved DPL_P5 DPL_P4 DPL_P3 DPL_P2 DPL_P1 DPL_P0 FEATUREc Fea	7:6 5 4 3 2 1 0 ature Regis	0 0 0 0 0	R/W R/W R/W R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5) Enable dyn. payload length data pipe 4. (Requires EN_DPL and ENAA_P4) Enable dyn. payload length data pipe 3. (Requires EN_DPL and ENAA_P3) Enable dyn. payload length data pipe 2. (Requires EN_DPL and ENAA_P2) Enable dyn. payload length data pipe 1. (Requires EN_DPL and ENAA_P1) Enable dyn. payload length data pipe 0. (Requires EN_DPL and ENAA_P0)
1C	Reserved DPL_P5 DPL_P4 DPL_P3 DPL_P2 DPL_P1 DPL_P0 FEATUREc Featers	7:6 5 4 3 2 1 0 ture Regis	0 0 0 0 0 0	R/W R/W R/W R/W R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5) Enable dyn. payload length data pipe 4. (Requires EN_DPL and ENAA_P4) Enable dyn. payload length data pipe 3. (Requires EN_DPL and ENAA_P3) Enable dyn. payload length data pipe 2. (Requires EN_DPL and ENAA_P2) Enable dyn. payload length data pipe 1. (Requires EN_DPL and ENAA_P1) Enable dyn. payload length data pipe 0. (Requires EN_DPL and ENAA_P0) Only '00000' allowed.
	Reserved DPL_P5 DPL_P4 DPL_P3 DPL_P2 DPL_P1 DPL_P0 FEATUREc Feater Reserved EN_DPL	7:6 5 4 3 2 1 0 ture Regis	0 0 0 0 0 0 0	R/W R/W R/W R/W R/W R/W	Only '00' allowed. Enable dyn. payload length data pipe 5. (Requires EN_DPL and ENAA_P5) Enable dyn. payload length data pipe 4. (Requires EN_DPL and ENAA_P4) Enable dyn. payload length data pipe 3. (Requires EN_DPL and ENAA_P3) Enable dyn. payload length data pipe 2. (Requires EN_DPL and ENAA_P2) Enable dyn. payload length data pipe 1. (Requires EN_DPL and ENAA_P1) Enable dyn. payload length data pipe 0. (Requires EN_DPL and ENAA_P0) Only '00000' allowed. Enables Dynamic Payload Length.

Enhanced ShockBurst™ Transmitting Payload

- 1. The configuration bit PRIM_RX has to be low.
- 2. When the application MCU has data to transmit, the address for the receiving node (TX_ADDR) and payload data (TX_PLD) has to be clocked into nRF24L01 through the SPI. The width of TXpayload is counted from number of bytes written into the TX FIFO from the MCU. TX_PLD must be written continuously while holding CSN low. TX_ADDR does not have to be rewritten if it is unchanged from last transmit. If the PTX device shall receive acknowledge, data pipe 0 has to be configured to receive the ACK packet. The RX address for data pipe 0 (RX_ADDR_P0) has to be equal to the TX address (TX_ADDR) in the PTX device. For the example in Figure 1

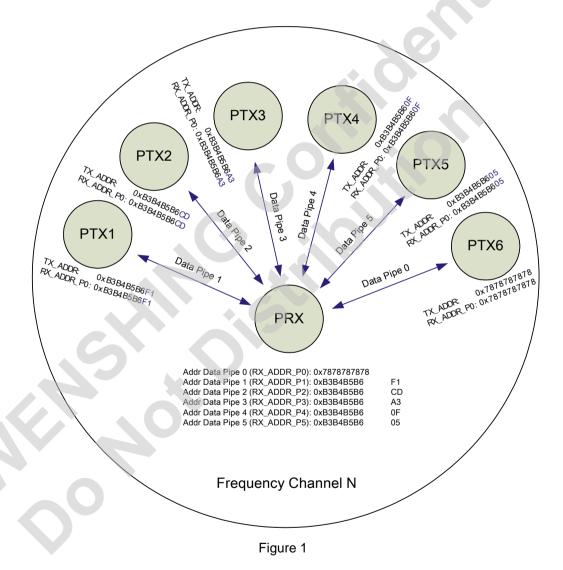

the following address settings have to be performed for the TX5 device and the RX device:

TX5 device: TX_ADDR = 0xB3B4B5B605

TX5 device: RX_ADDR_P0 = 0xB3B4B5B605


RX device: RX ADDR P5 = 0xB3B4B5B605

- 3. A high pulse on **CE** starts the transmission. The minimum pulse width on CE is 10µs.
- 4. nRF24L01 ShockBurst™:
 - Radio is powered up.
 - □ 16MHz internal clock is started.
 - RF packet is completed (see the packet description).
 - Data is transmitted at high speed (1Mbps or 2Mbps configured by MCU).
- 5. If auto acknowledgement is activated (ENAA_P0=1) the radio goes into RX mode immediately, unless the NO_ACK bit is set in the received packet. If a valid packet has been received in the valid acknowledgement time window, the transmission is considered a success. The TX_DS bit in the STATUS register is set high and the payload is removed from TX FIFO. If a valid ACK packet is not received in the specified time window, the payload is retransmitted (if auto retransmit is enabled). If the auto retransmit counter (ARC_CNT) exceeds the programmed maximum limit (ARC), the MAX_RT bit in the STATUS register is set high. The payload in TX FIFO is NOT removed. The IRQ pin is active when MAX_RT or TX_DS is high. To turn off the IRQ pin, the interrupt source must be reset by writing to the STATUS register (see Interrupt chapter). If no ACK packet is received for a packet after the maximum number of retransmits, no further packets can be transmitted before the MAX_RT interrupt is cleared. The packet loss counter (PLOS_CNT) is incremented at each MAX_RT interrupt. That is, ARC_CNT counts the number of retransmits that was required to get a single packet through. PLOS_CNT counts the number of packets that did not get through after maximum number of retransmits.
- 6. nRF24L01 goes into standby-I mode if **CE** is low. Otherwise next payload in TX FIFO is transmitted. If TX FIFO is empty and **CE** is still high, nRF24L01 enters standby-II mode.
- 7. If nRF24L01 is in standby-II mode, it goes to standby-I mode immediately if **CE** is set low.

Enhanced ShockBurst™ Receive Payload

- 1. RX is selected by setting the PRIM_RX bit in the CONFIG register to high. All data pipes that receive data must be enabled (EN_RXADDR register), auto acknowledgement for all pipes running Enhanced ShockBurst™ has to be enabled (EN_AA register), and the correct payload widths must be set (RX_PW_Px registers). Addresses have to be set up as described in item 2 in the Enhanced ShockBurst™ transmit payload chapter above.
- 2. Active RX mode is started by setting CE high.
- 3. After 130µs nRF24L01 is monitoring the air for incoming communication.
- 4. When a valid packet has been received (matching address and correct CRC), the payload is stored in the RX-FIFO, and the RX_DR bit in STATUS register is set high. The IRQ pin is active Revision 2.0 Page 66 of 74 when RX_DR is high. RX_P_NO in STATUS register indicates what data pipe the payload has been received in.
- 5. If auto acknowledgement is enabled, an ACK packet is transmitted back, unless the NO_ACK bit is set in the received packet. If there is a payload in the TX_PLD FIFO, this payload is added to the ACK packet.
- 6. MCU sets the **CE** pin low to enter standby-I mode (low current mode).
- 7. MCU can clock out the payload data at a suitable rate through the SPI.
- 8. nRF24L01 is now ready for entering TX or RX mode or power down mode.


State Diagram

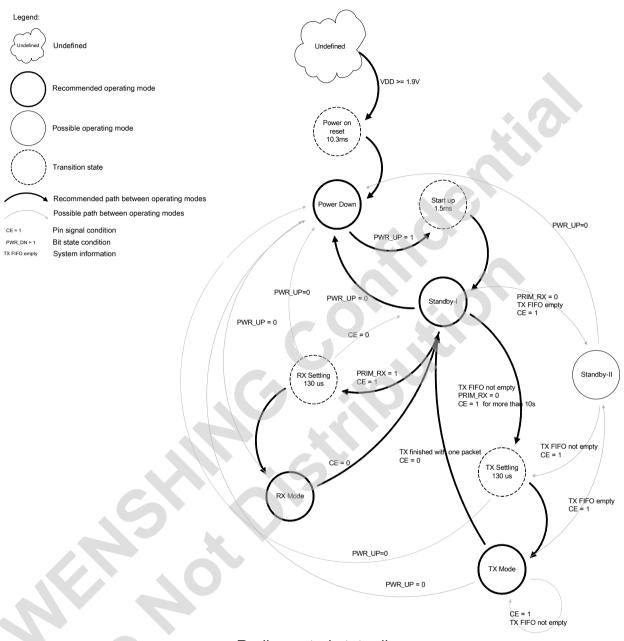

Radio control state diagram

Communication Example 1: When transferring date to 2.4GHz, the Length is XX; REGISTER is shown from table below:

Address	00	01	02	03	04	05	06	07
Data								
Address	08	09	0A	0B	0C	0D	0E	OF
Data								9
Address	10	11	12	13	14	15	16	17
Data								
Address	18	19	1A	1B	1C	1D		
Data								

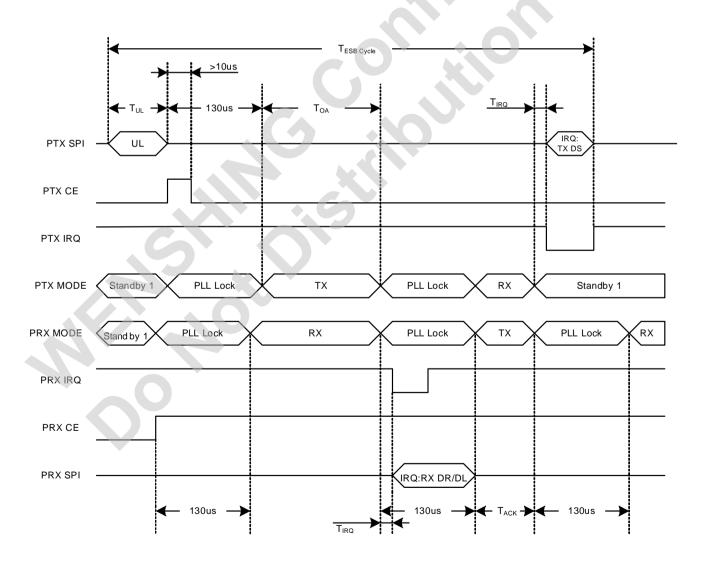


Timing of Enhanced ShockBurst™ for one packet upload (2Mbps)

Communication Example 2: When transferring date to 2.4GHz, the Length is XX; REGISTER is shown from table below:


Address	00	01	02	03	04	05	06	07
Data								
Address	08	09	0A	0B	0C	0D	0E	0F
Data								
Address	10	11	12	13	14	15	16	17
Data								
Address	18	19	1A	1B	1C	1D		
Data								

Output Power

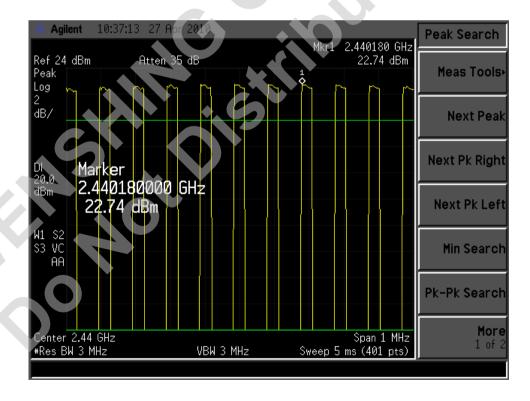

Layout Notes

 It should be to add several big capacitors before power on to increase stable RF communication.

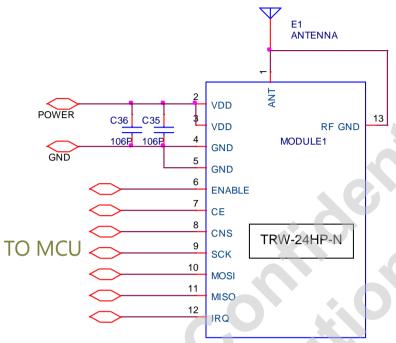

- It should not run digital signal at end of module to avoid EMI transmitted to RF module.
- Module add external antenna, the bottom part of the PCB antenna should be as much as possible to provide non- copper park area for the antenna radiation use.
- Please notice, if you used termial inside the module to connect with external antenna, ANT PIN & RF GND PIN don't solder on PCB.