



## Install battery

Open back cover, make sure to put the battery poles in the right place. Download with Android phone.



Scan QR code to download



## Turn on to enter AP mode

Press 3 times quickly, after 3 bibi sounds then enter AP mode, red and white light will cross flicker. When in AP mode, if not paired with a phone, it will automatically turn off after 120 seconds.



Press 3 times quickly



Red & White light will cross flicker




## Device connecting

When turn on in AP mode, Red & White light will cross flicker.



Red & White light will cross flicker

Start the APP (WiFi connected), click "Add" to search for new device.

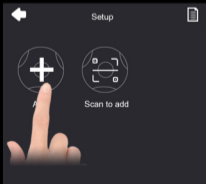




# Instructional Manual



In connection setup page, enter password of the WiFi.  
Click "Connect".

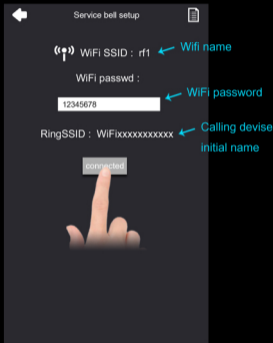



# Instructional Manual



After clicking "Connect", a connecting icon will appear below and spin. It will be redirected to "Setup" when connected.






# Instructional Manual



After automatically redirected to "Setup", an icon of connected calling device will show.

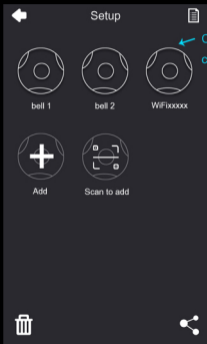



## Reset to AP mode

If the calling device has set WiFi parameter and connected to the APP, it will enter Cloud mode when turned on. If you seek to resume AP mode, Press 3 times quickly in off state, after 3 bibi sounds then turn it on to enter AP mode. Red& white light will flicker, then it can reconnect to the APP.



OFF



Press quickly




Red & white light will cross flicker



## Calling devise setup

Click the calling devise icon to "Setup".

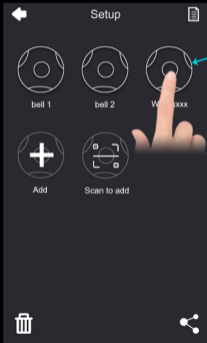




# Instructional Manual



Click the calling device icon to "Device setup". Click "Save" when finished.

Service bell setup

  192.168.2.41

Receive this bell

Receive this bell



Receive this bell

Receive this bell

Receive this bell

Receive this bell

Receive this bell

Change calling device name

Enter 0~9999

Enter 0~9

Click to save







# Instructional Manual



Click "Update " to check if any update is available.

Service bell setup

bell 3  
192.168.2.41

Receive this bell

Receive this bell

Receive this bell

Receive this bell

Receive this bell

0 - 8888 Receive this bell

0 - 9 Receive this bell

 
Click "Update"



# Instructional Manual





If there's any update, an update content window will pop up. Click "Update" and long press the calling device to record mode, then press 2 times. Don't let go the 2nd press until the App shows update progress. If no update is available, click "Exit" to leave. If no update is available, there will be a pop-up say so.



← Show update content

  1. Long press
2. Then press 2 times
3. Don't let go




← No update is available



## Delete the calling devise

Click "Delete", a box will show under the icon.

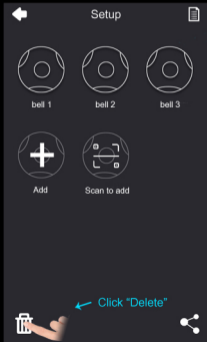




# Instructional Manual



Select the one you want, Click "Delete" to erase it.

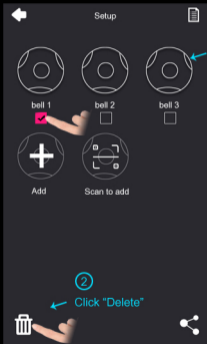

①

Select the  
calling devise


②

Click "Delete"



## Share the calling devise

Click "Share", a box will show under the icon.

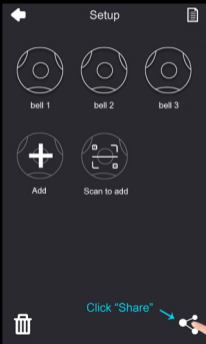




# Instructional Manual



Select the one you want, Click "Share" to share.

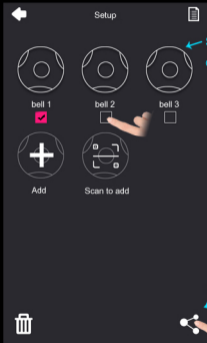

1

Select the calling devise

2

Click "Share"



Select the one you want, Click "Share " to share.






# Instructional Manual



Start the app in a new phone, click "Scan to add".

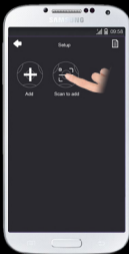


Click "Scan to add"







Click "Scan to add", the APP will turn on the camera and enter scan page.

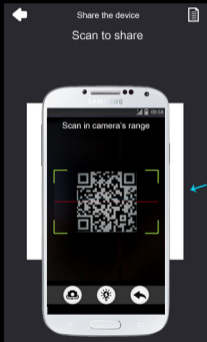



# Instructional Manual



After successfully added by scanning, it will return to "Setup". Icon of the new calling device will show, click it to receive messages.



Show icon of the new calling device



## Calling device call

### Press to call

Press then release in 1 secs, after 2 bibi sounds, white light will shine or flicker, it means the call is made (Red light flickering means net dysfunction) and a call alert will pop up.



Press (Within 1 secs)



White light shines



Res light flickers

Click the pop-up to close it



Information window pop up



## Voice call

Long press, after 1 bibi sound, white light flickering means recording. If record less than 4 secs, you need to press again to end, or it will record 56 secs more.

White light shining means connecting, flickering means message sending. When message sent, a pop-up of that device will show, then the calling device will turn off.



Long press



White light flickers (record/send)



White light shines (connect)

Click the pop-up to close



Information window pop up



## Voice call

Anomaly :

1. When the router not connected, red & white light shines. When it stops, red light flickers 1 time, make 1 bibi sound.
2. When the server not connected, red light flickers 4 times and white light shines. When it stops, red light flickers 2 time, make 2 bibi sound.
3. When voice call transmits over time, red light flickers 3 times, make 3 bibi sound.
4. When call transmits over time, red light flickers 4 times, make 4 bibi sound.
5. When hardware connecting errored, red light flickers 5 times, make 5 bibi sound.





## Check

After the calling device added, "Check" will be set as homepage. Click setup icon to enter "Setup".

Annotations:

- Exit
- Instruction
- Charge
- Calling devise name
- Call time
- Voice call icon
- Call icon
- Click the icon to enter "Setup"

Icon	Calling Device Name	Call Time	Battery Status
	Bell 1	14:02	
	Bell 2	8"	
	Bell 3	12"	
	Bell 1	08:02	
	Bell 3	06:26	
	Bell 2	Yesterday 22:19	




# Instructional Manual



Click the voice message area to play, it will turn green.

Click call message area will make no response.

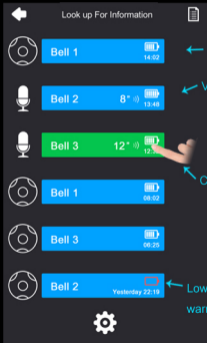

← Call message

← Voice message

← Click to play


← Low battery warning



# Instructional Manual

## Delete message

Long press message area, enter "Delete" page. Boxes will appear at right side of the messages, select manually or click "All" to select all. Click "All", then click "Delete" to delete all messages.

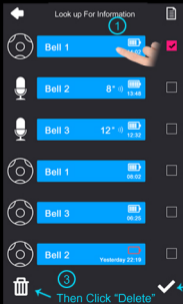

2

Select message

3

Click "All"