

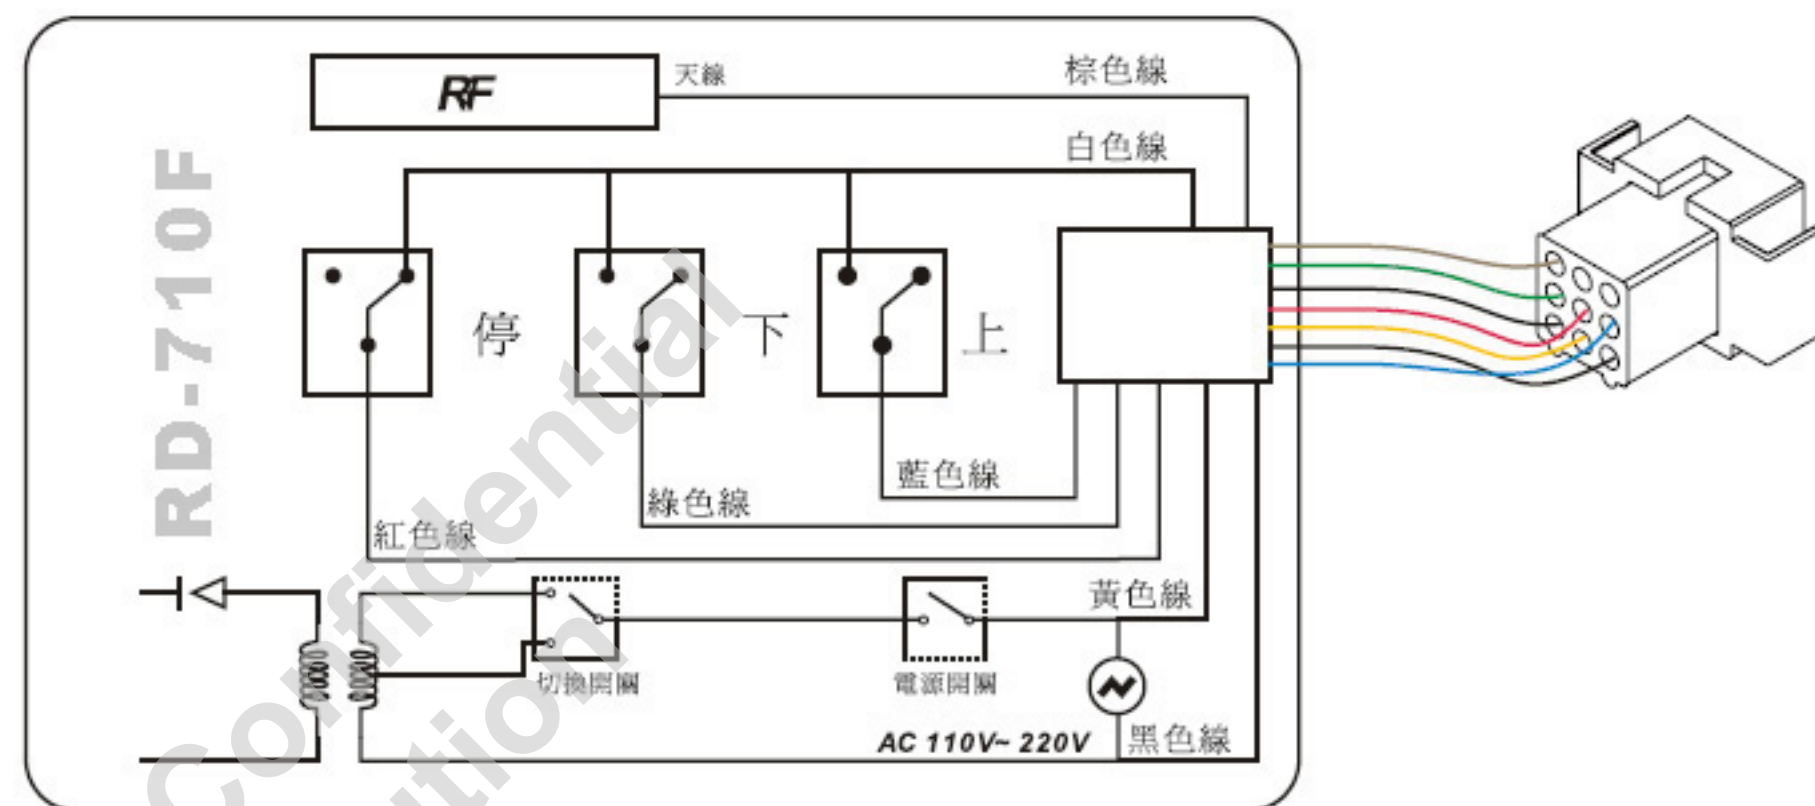


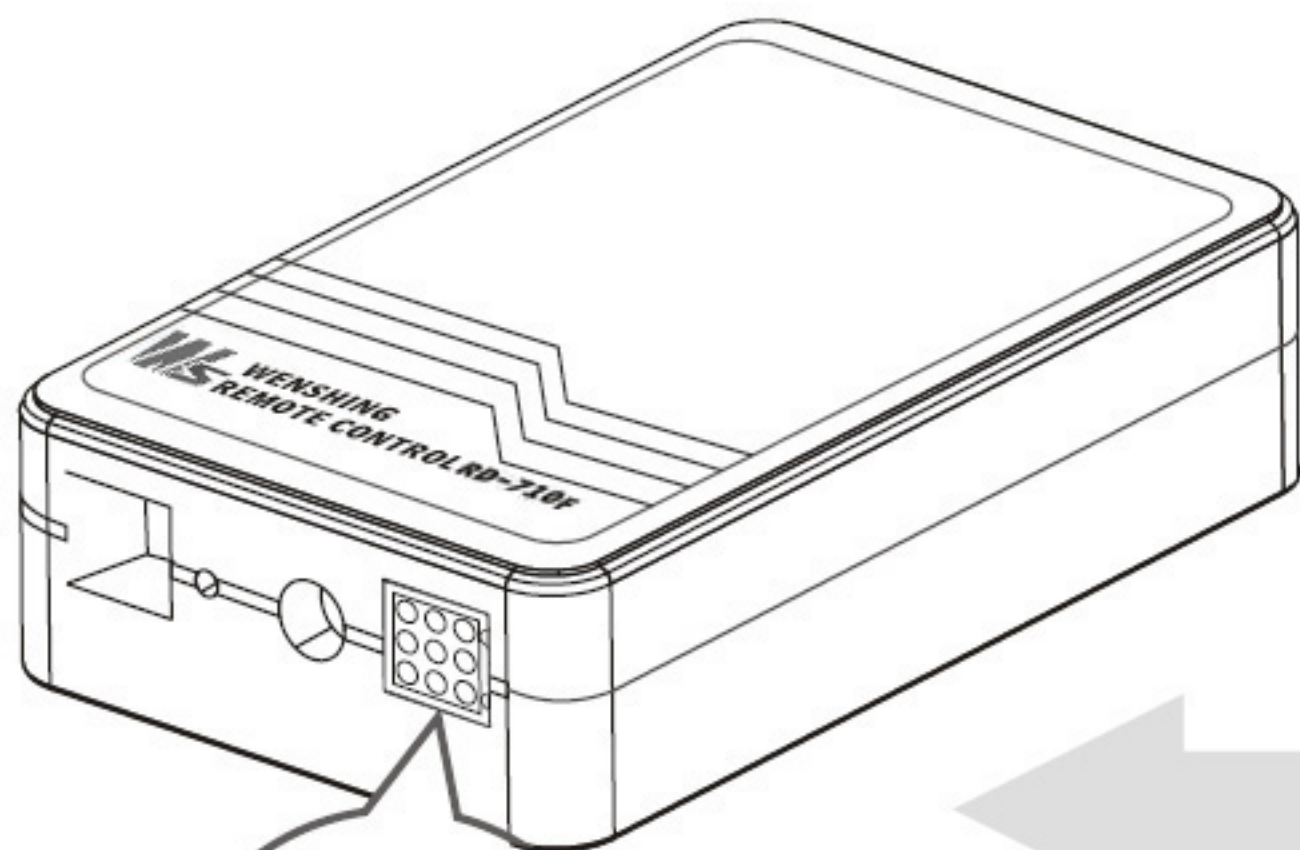

AC POWER(電源, 黑色線)
AC POWER(電源, 黃色線)
UP(上, 藍色線)
COM(共線, 紅色線)
STOP(停, 白色線)
DOWN(下, 綠色線)
ANT(天線, 棕色線)

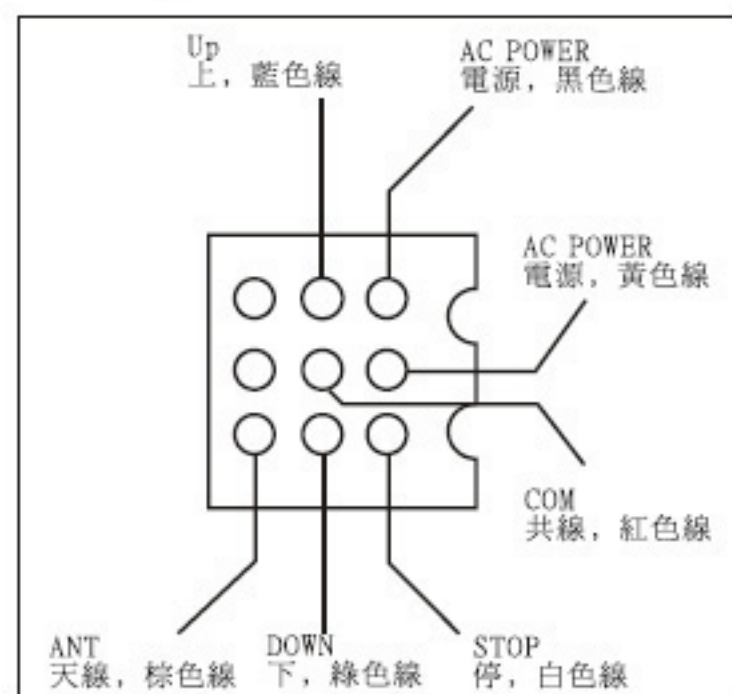

UP(上, 藍色線)併接


MOTO 原線不動

MOTO 原線不動



STOP(停, 白色線)



COM(共線, 紅色線)

DOWN(下, 綠色線)併接


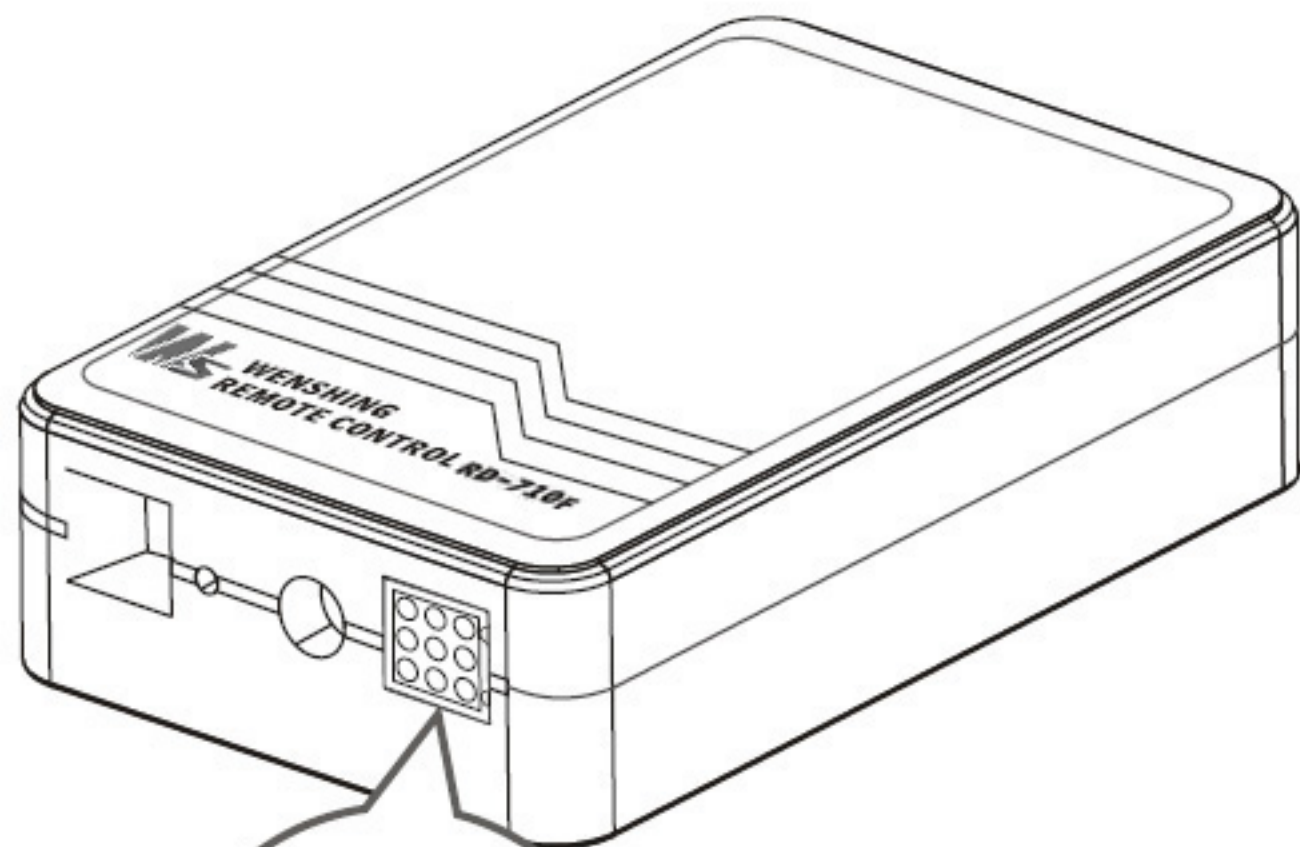


COM (共線, 灰色線)
AC POWER(電源, 黑色線)
AC POWER(電源, 黃色線)
UP(上, 藍色線)
STOP (停, 紅色線)
STOP(停, 白色線)
DOWN(下, 綠色線)
ANT(天線, 棕色線)

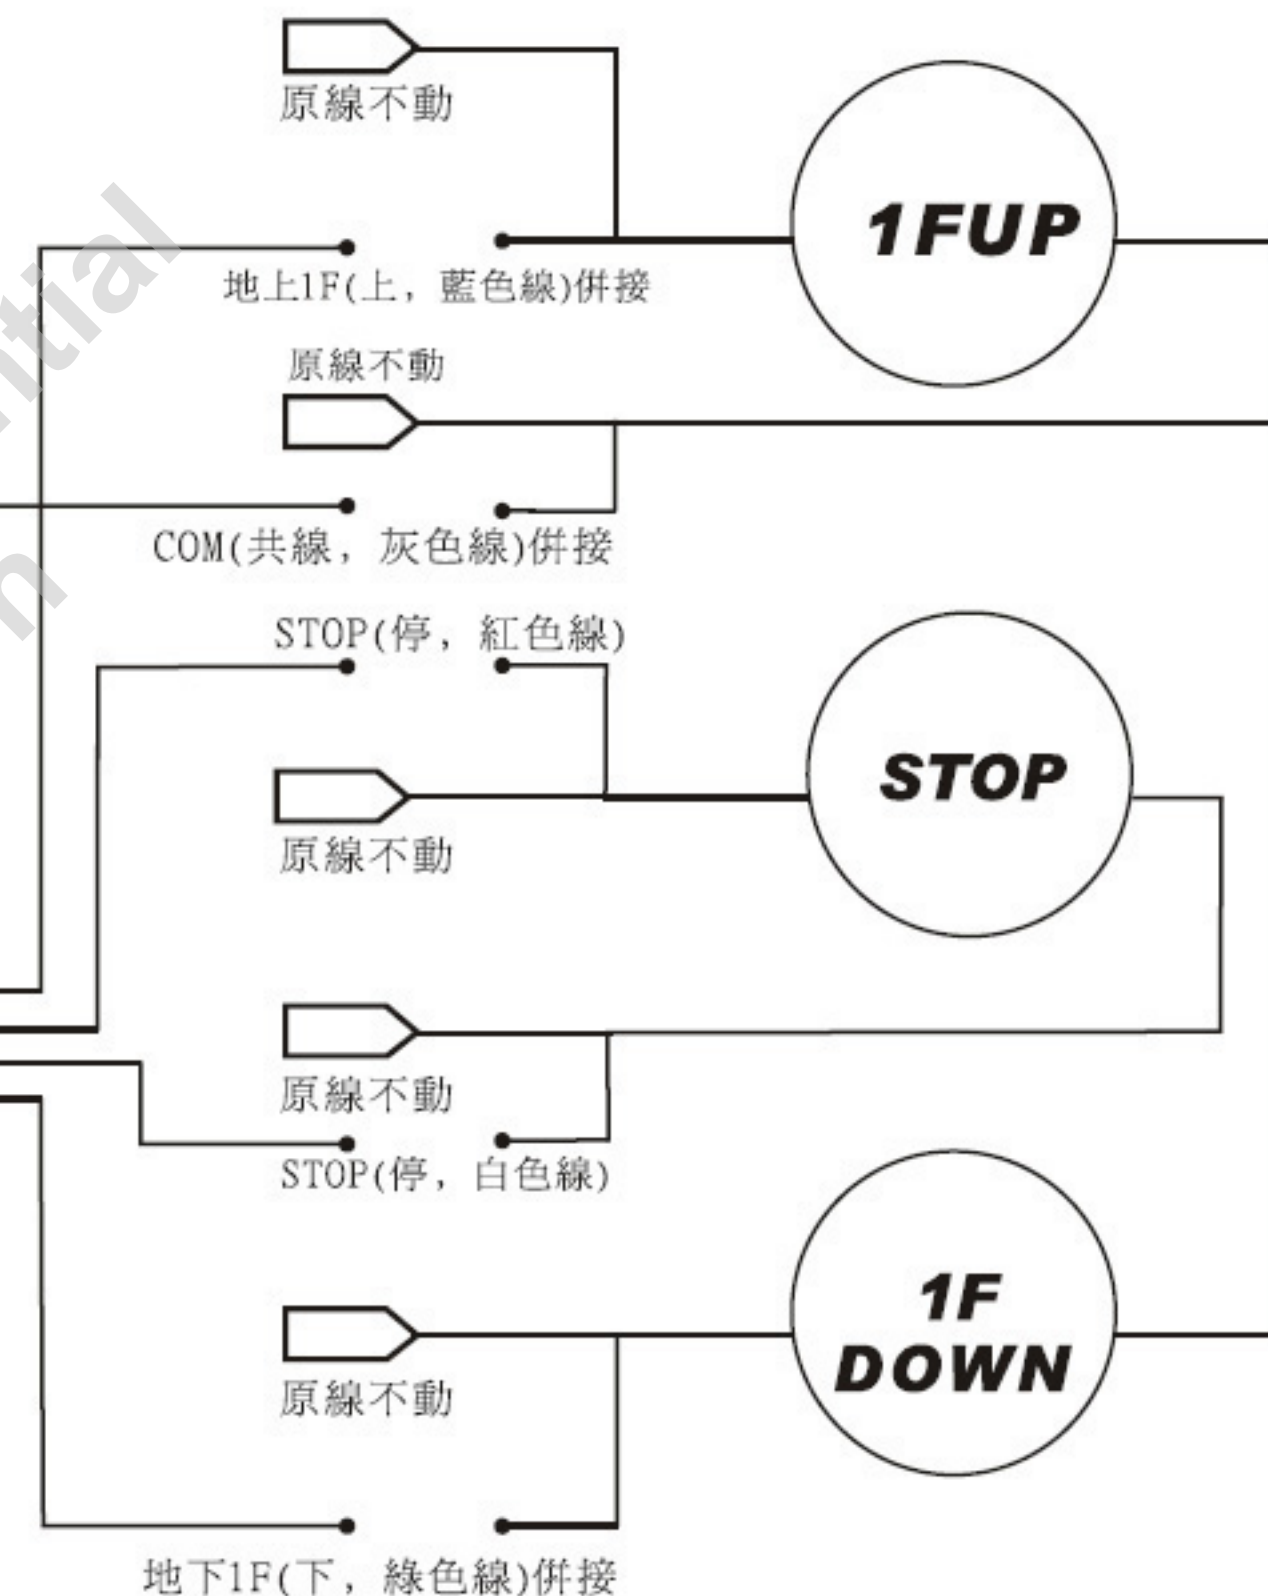
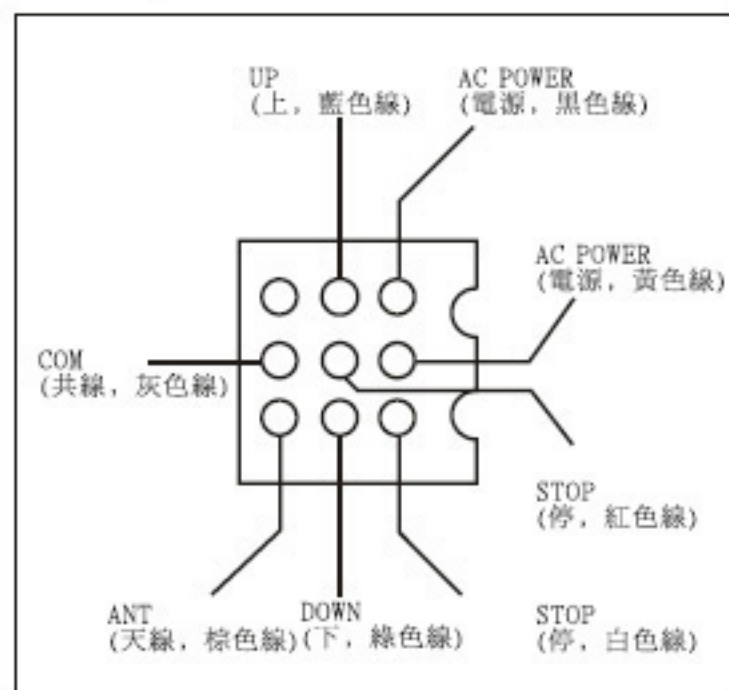


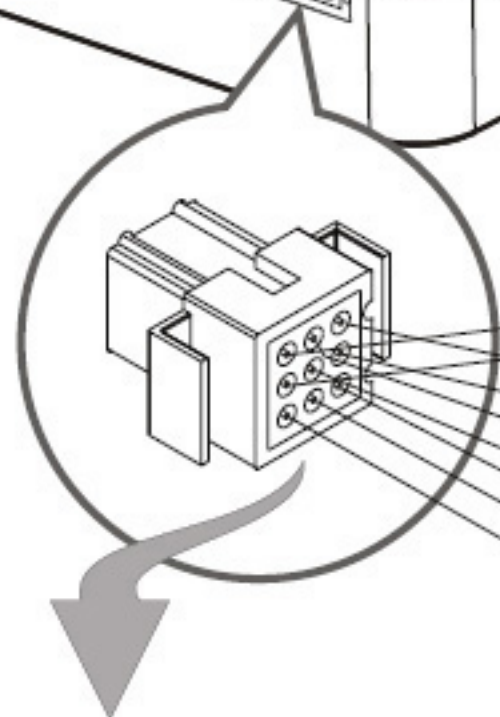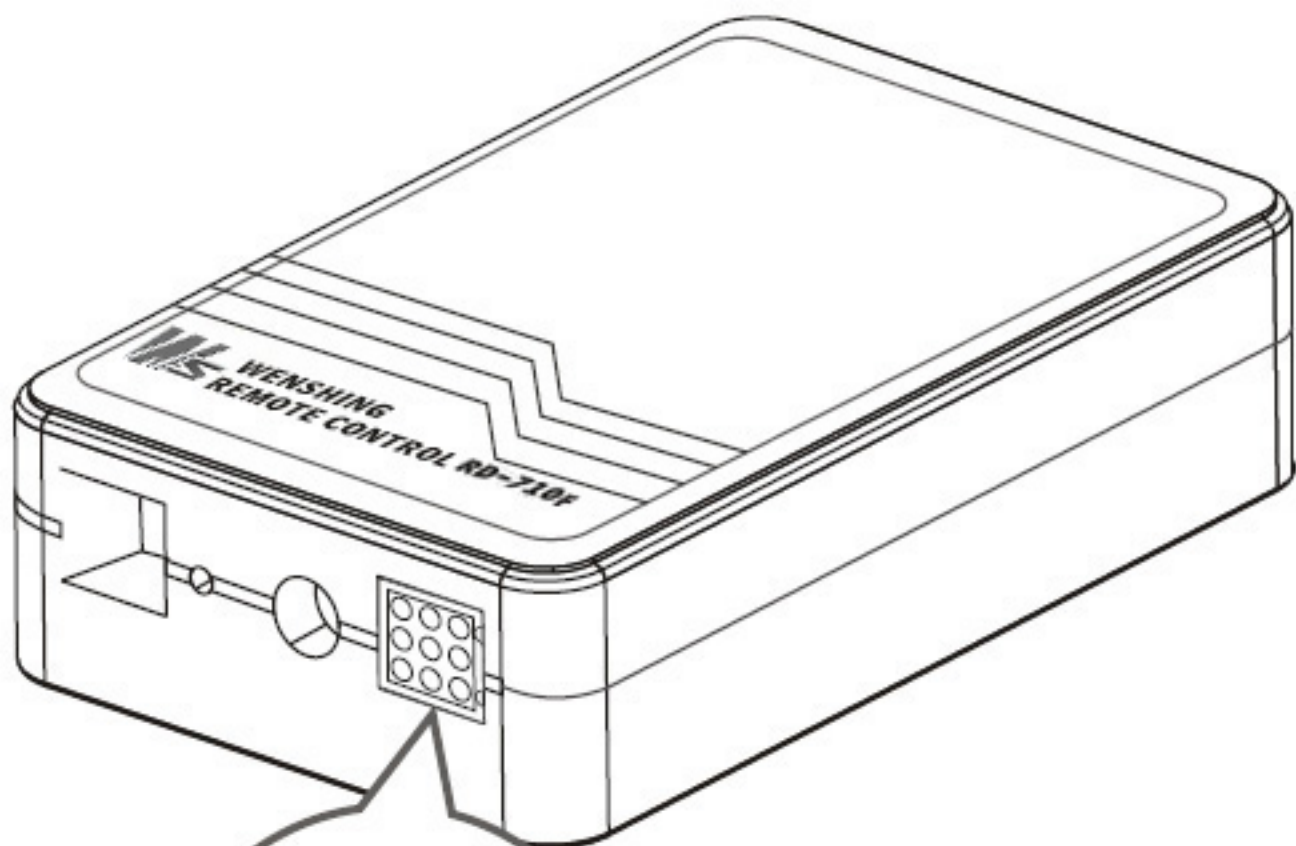



地下2F, 紫色線
COM (共線, 灰色線)
AC POWER(電源, 黑色線)
AC POWER(電源, 黃色線)
地上1F, 藍色線
STOP (停, 紅色線)
STOP(停, 白色線)
地下1F, 綠色線
ANT(天線, 棕色線)

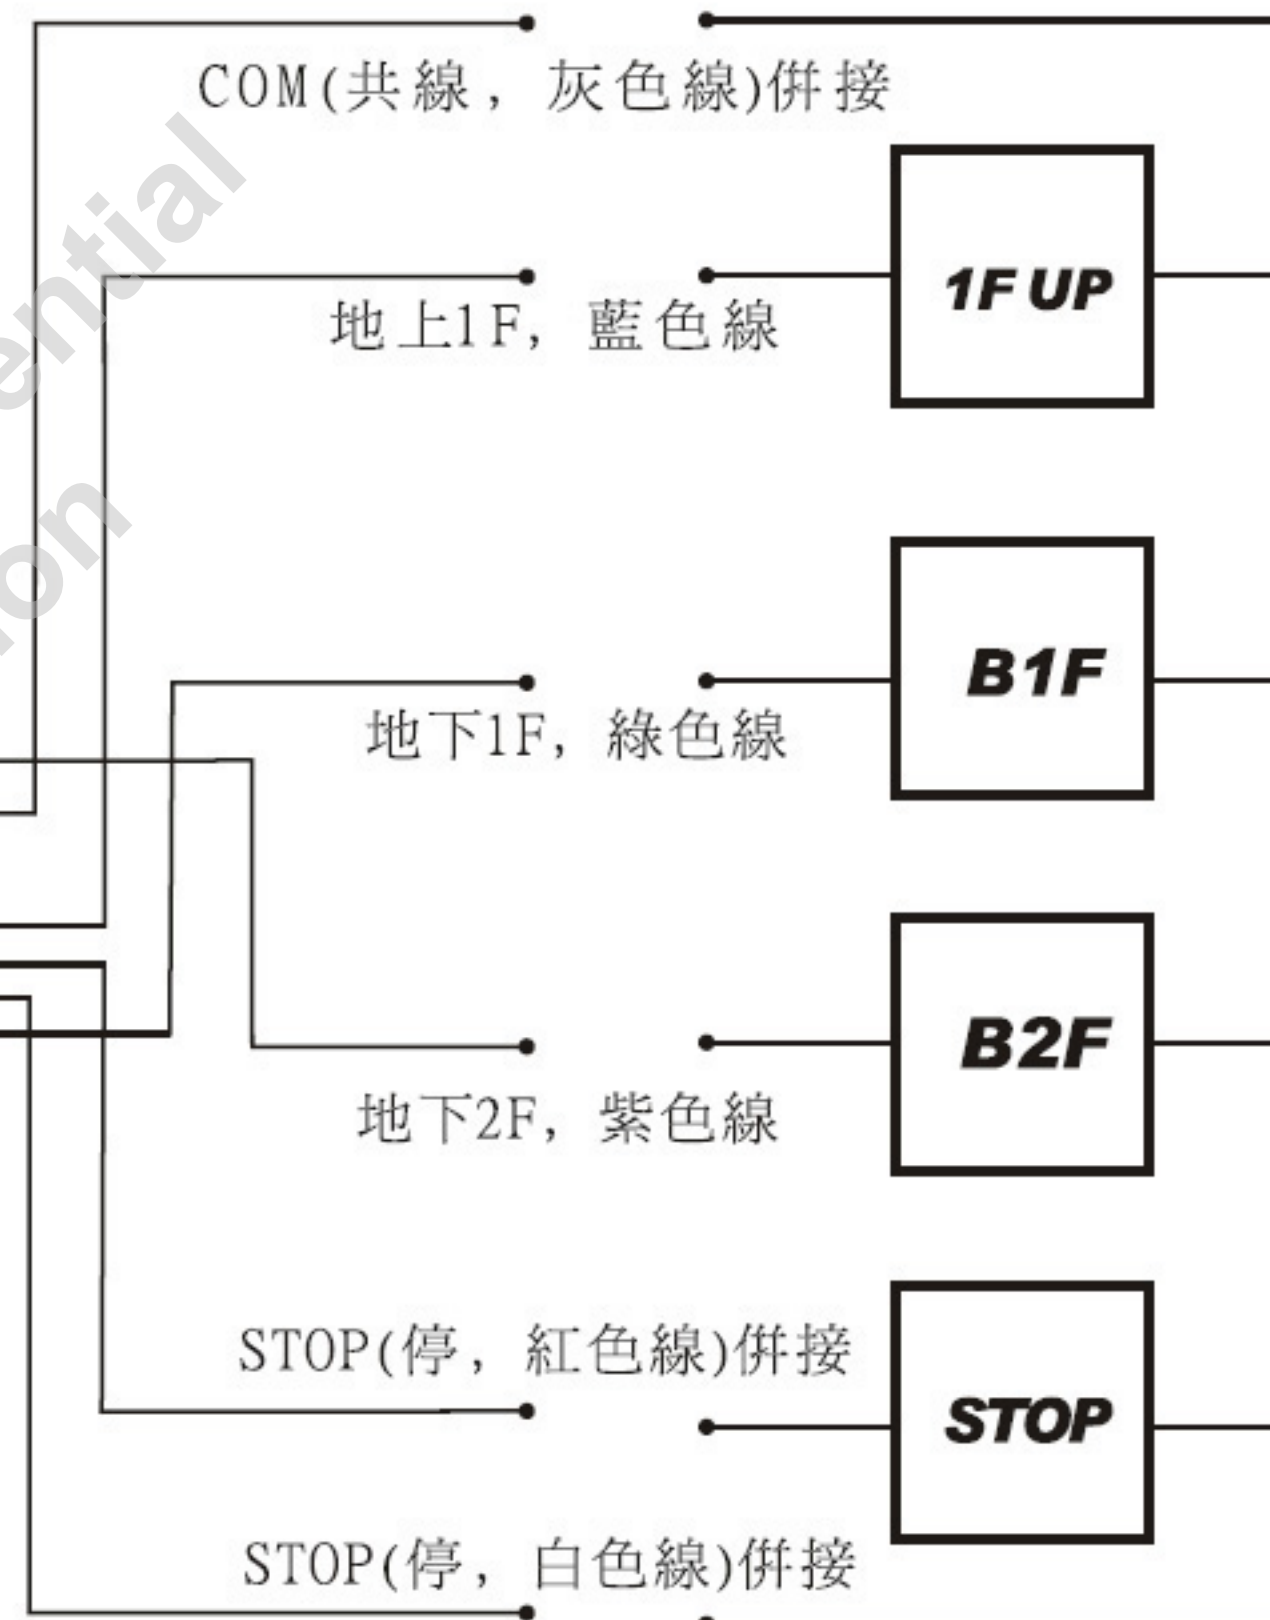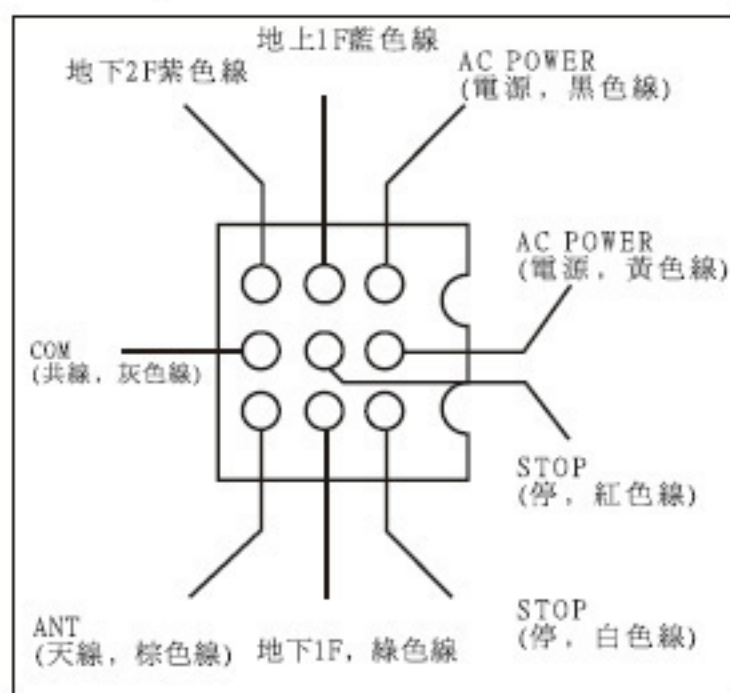

RD-710F (4A Type) 升降機接線圖 WENSHING ELECTRONICS CO.,LTD.

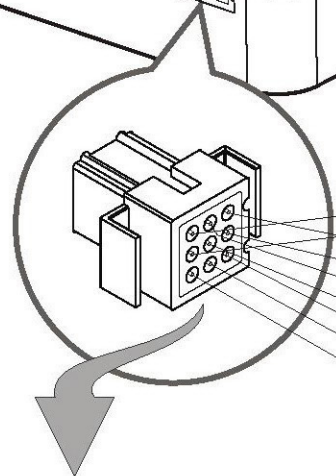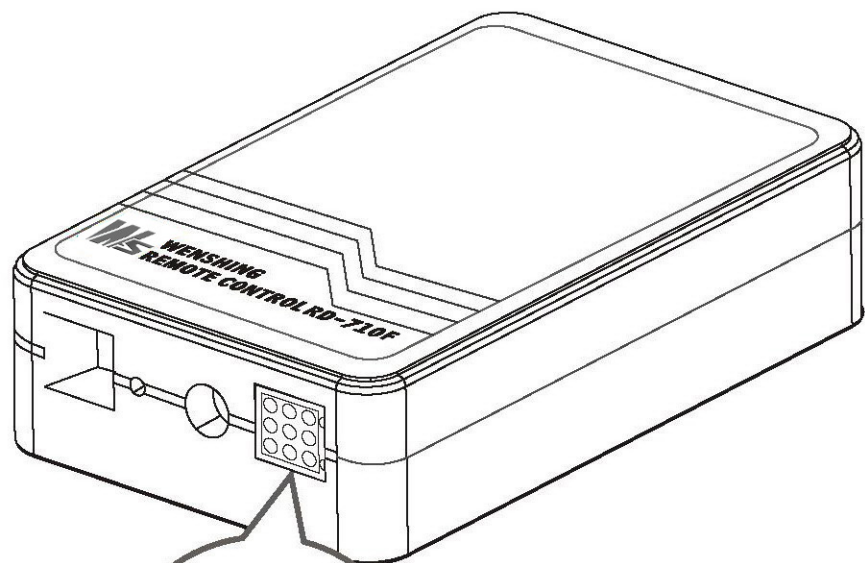

B2, 綠色線
COM (共線, 灰色線)
AC POWER (電源, 黑色線)
AC POWER (電源, 黃色線)
1F, 藍色線
EXIT (NO), 紅色線 併接
EXIT (NO), 白色線 併接
B1, 紫色線
ANT (天線, 棕色線)

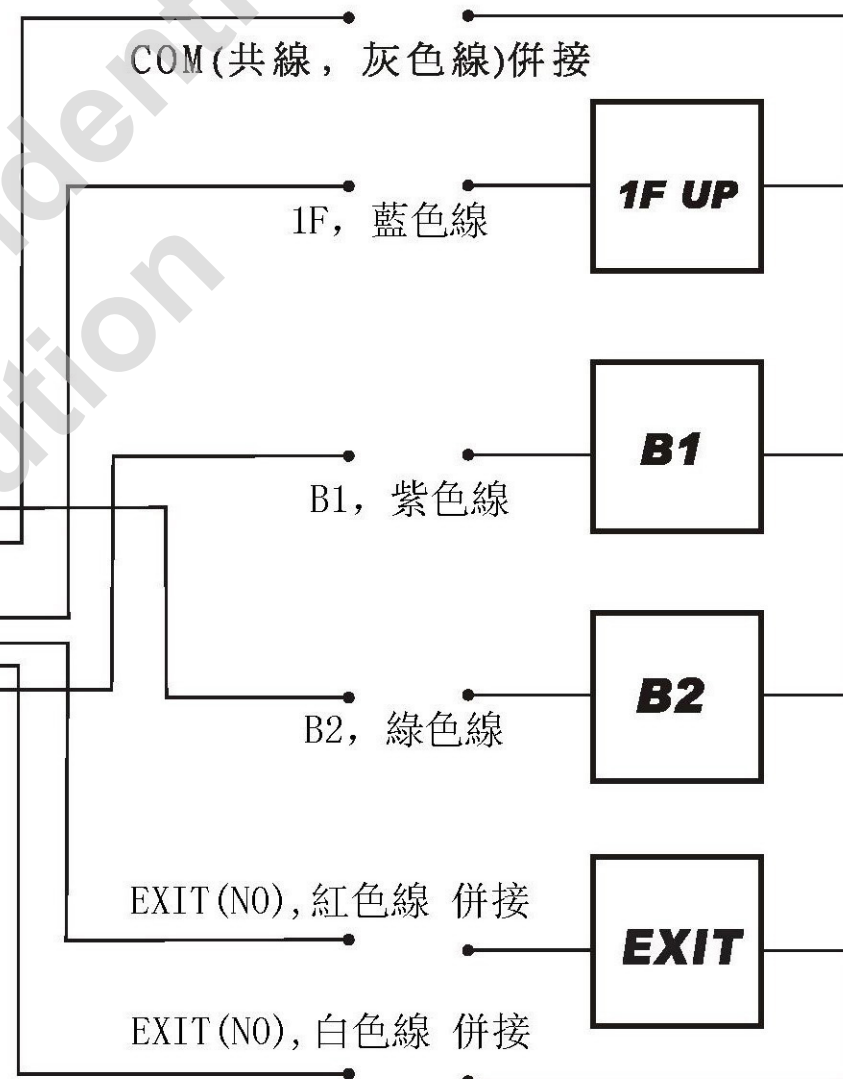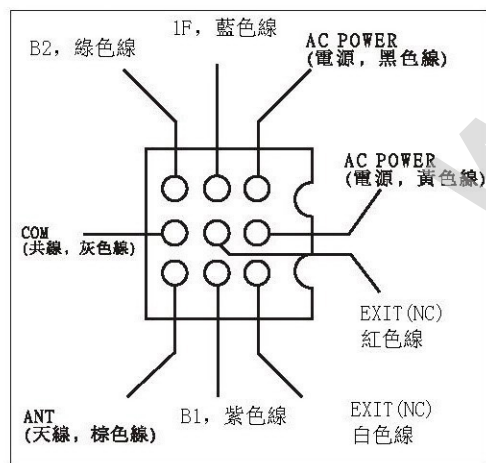

RD-710F 控制模式對照表

遙控器型號	指撥開關撥碼模式 	繼電器模式
TX-FM04(B1B2)	4 ON	鐵捲門模式
	2,4 ON	升降機模式
	1,4 ON	自動下降模式
	1,2,3 ON	單點控制
TX-FM04 (OPEN,STOP)	4 ON	鐵捲門模式
	2,4 ON	升降機模式
	1,4 ON	自動下降模式
	1,2,3 ON	單點控制

RD-710F安裝步驟:

1. 打開包裝盒後，請檢視配件是否齊全（主機*1、遙控器*2、固定架*1、線材*1）。
2. 將馬達電源切斷，以免發生危險。
3. 依照圖示將線材安裝於馬達配線盤。
4. 將主機固定後，接上線材。
5. 馬達電壓有分110V及220V，先檢視馬達電壓是幾伏特，再將本主機之電壓開關撥至相同之電壓。
6. 將馬達電源打開，通電後測試功能如皆正常，安裝程序即告完成。
7. 通電後如仍有問題，請檢視配線是否正確、電壓是否已切換一致、密碼有無撥至相同。
8. 安裝如仍有問題，請與經銷商聯繫。

* 特別注意，需將本主機之電壓開關撥至與馬達相同之電壓，才可以通電；電壓如不同，本主機內部的變壓器即會燒壞。

RD-710F Control Mode List

Remote Controller Model No.	Dip Switch Dial Code 	Relay Mode
TX-FM04(B1B2)	4 ON	Roll-up door mode
	2,4 ON	Lift Mode
	1,4 ON	Automatically decrease mode
	1,2,3 ON	Single point control
TX-FM04 (OPEN,STOP)	4 ON	Roll-up door mode
	2,4 ON	Lift Mode
	1,4 ON	Automatically decrease mode
	1,2,3 ON	Single point control

RD-710F Step:

1. After you open box, please check whole accessories are complete. (Host*1pcs, Remote controller *2pcs, Fix stand*1pcs, wire*1pcs)
2. Please check motor power supply to avoid danger.
3. Please put wire installed in the motor wiring plate according to the wiring drawing on manual.
4. After fix the host on the wall, please connect the wire.
5. Motor voltage has 110V and 220V, please check voltage value on motor and adjust the host power supply to the same voltage as motor power supply.
6. Open motor power supply. If power function is normal, it is meaning you finished assemble.
7. If it still has problem, please check following:
 - Wire connection is correct
 - Voltage is the same as motor
 - Dip code is the same.
8. If you still have problem on using, please contact disruptor .

* Please notice, host voltage needs to same as motor so that they just can start to work. If working based on different voltage between host and motor, host adaptor will be burned.