


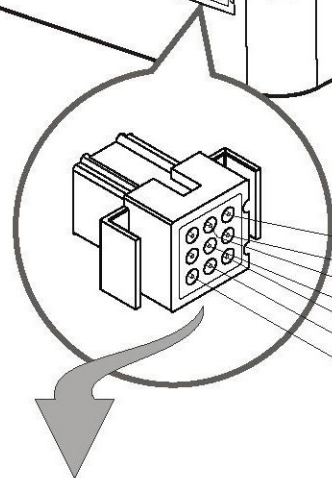
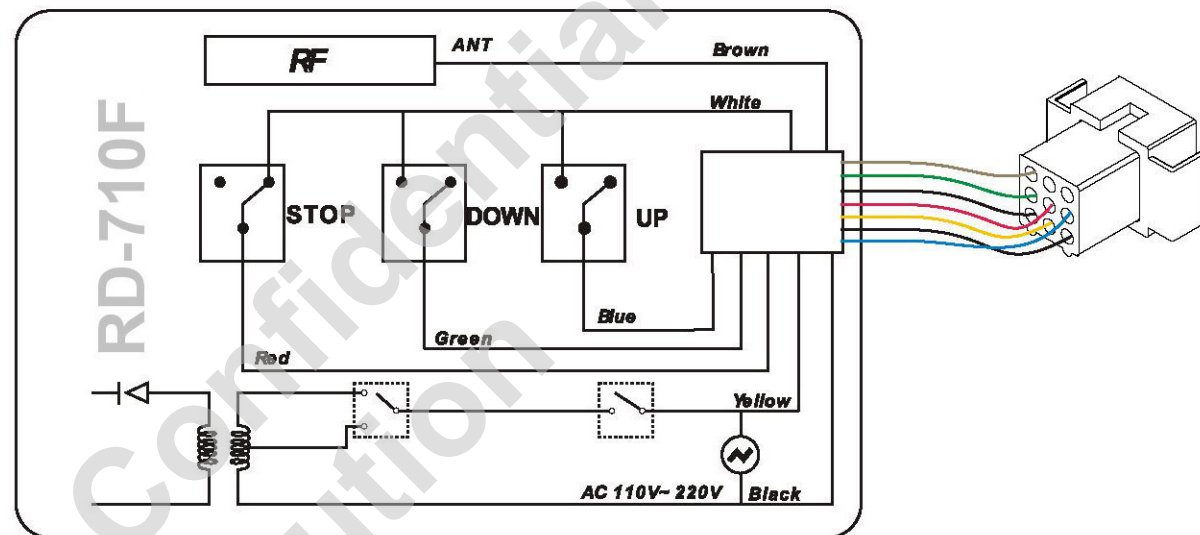
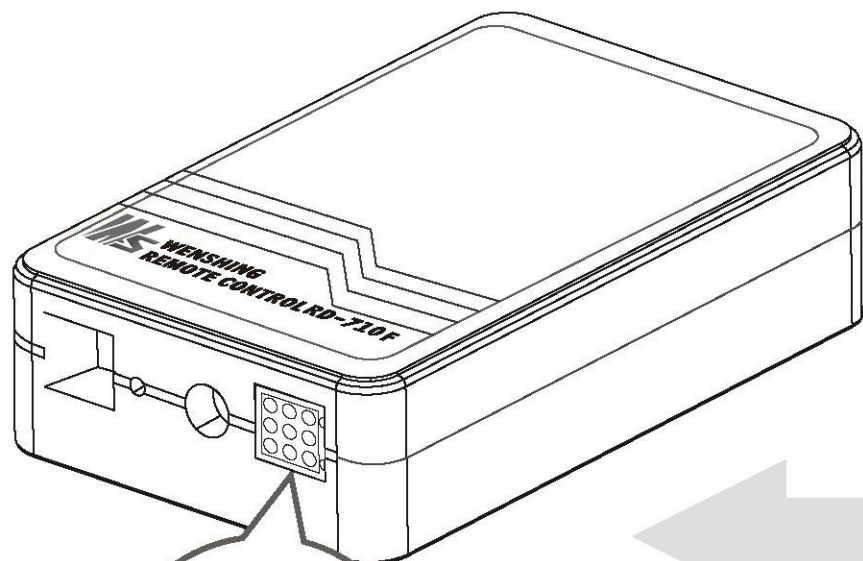
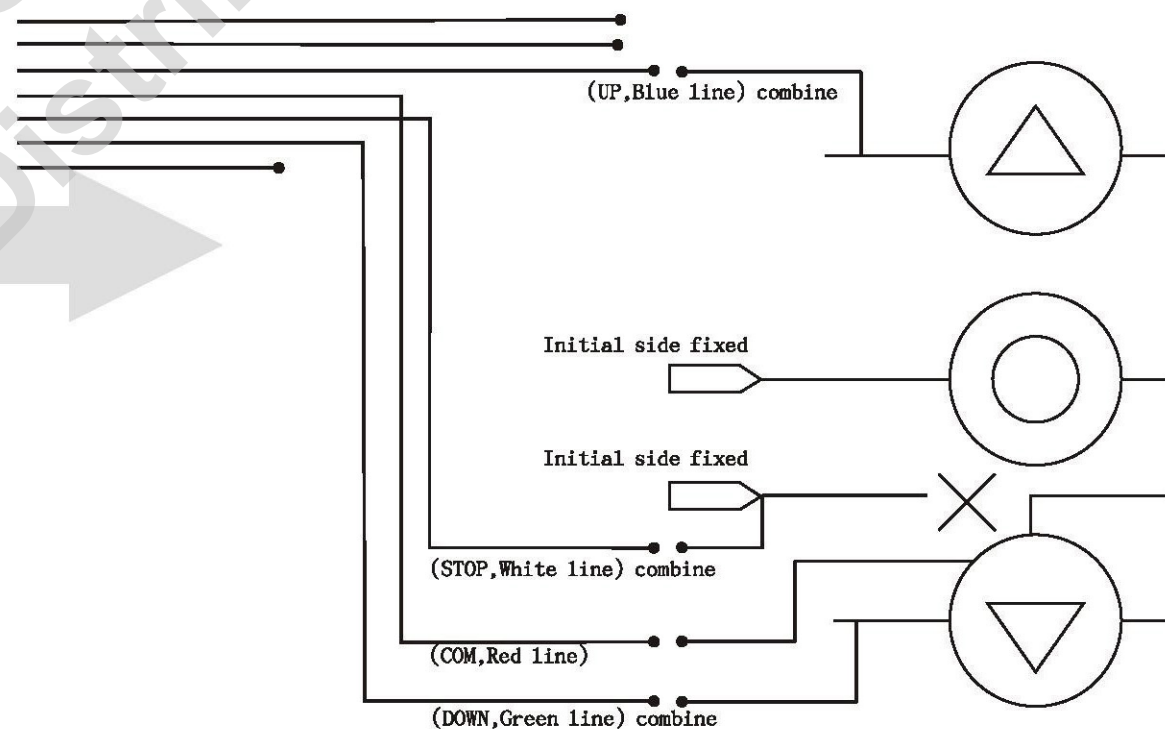



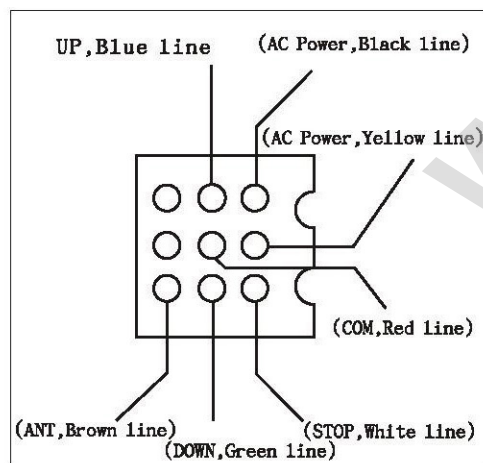




(AC Power,Black line)
 (AC Power,Yellow line)
 (UP,Blue line)
 (COM,Red line)
 (STOP,White line)
 (DOWN,Green line)
 (ANT,Brown line)

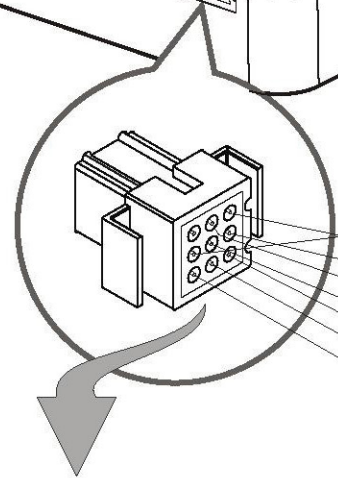


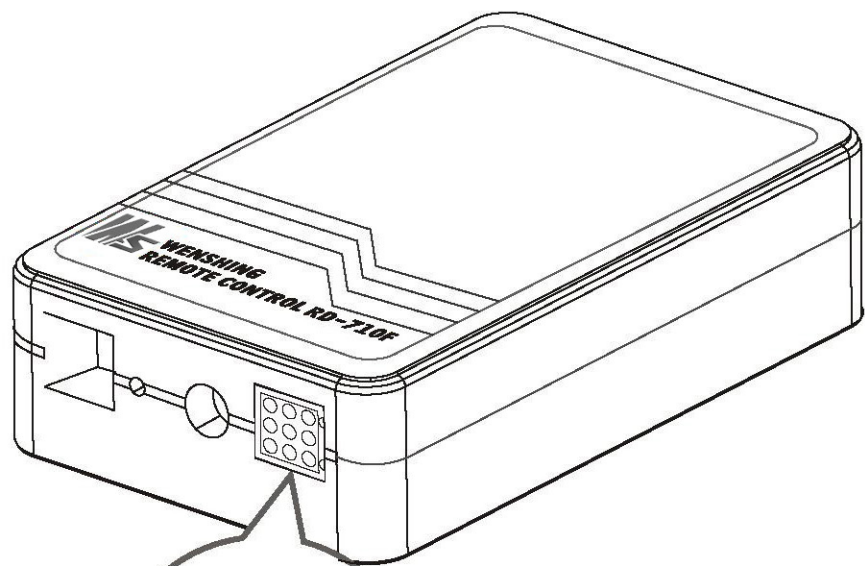




- (COM,Gray line)
- (AC Power,Black line)
- (AC Power,Yellow line)
- (UP,Blue line)
- (STOP,Red line)
- (STOP,White line)
- (DOWN,Green line)
- (ANT,Brown line)

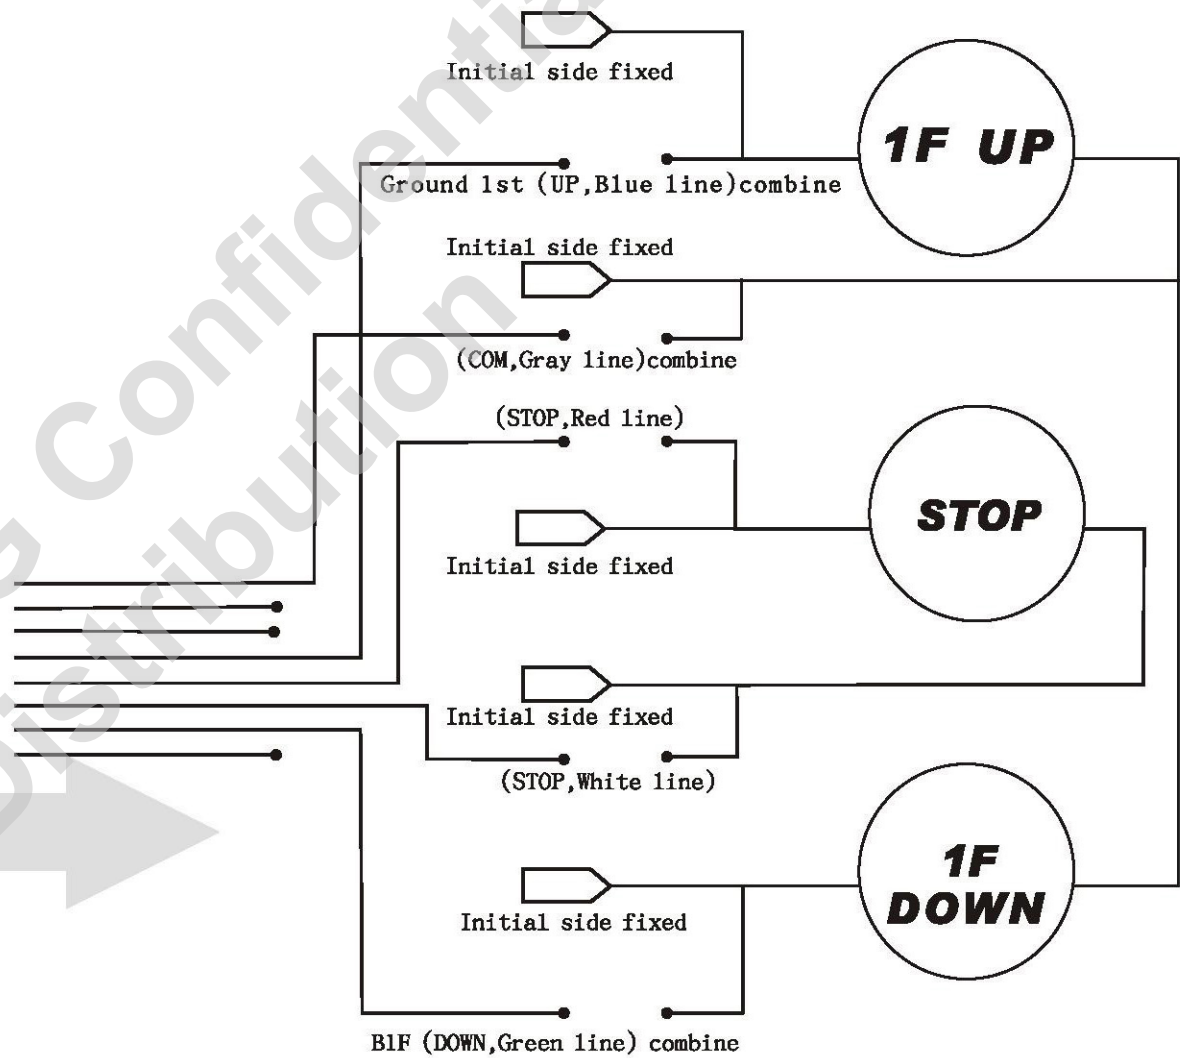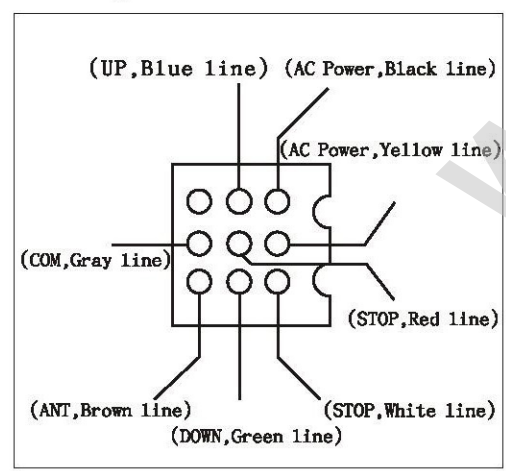

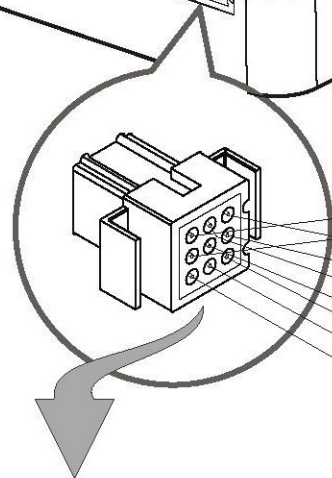
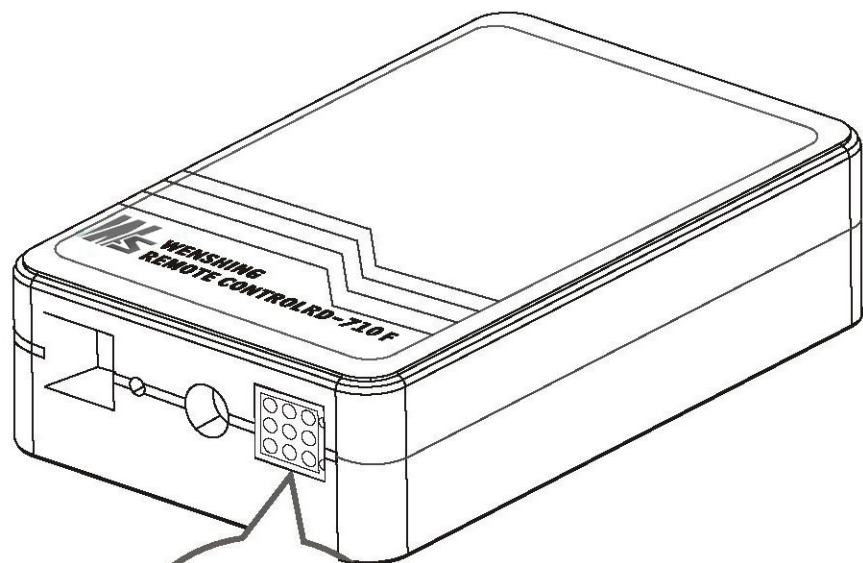


B2, Green line
Com(Line-shared, Gray line)
AC Power(Black line)
AC Power(Yellow line)
1F, Blue line
EXIT(NC), Red line combine
EXIT(NC), White line combine
B1(Purple line)
ANT(Antenna, Brown line)

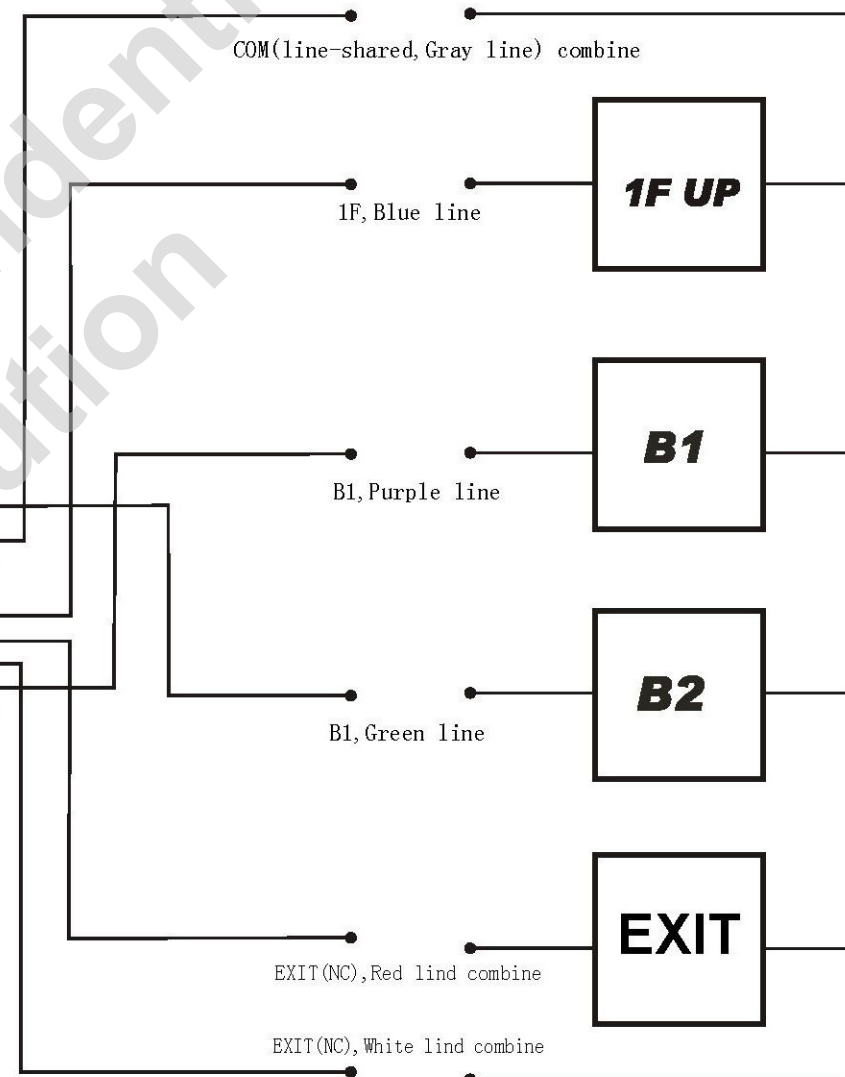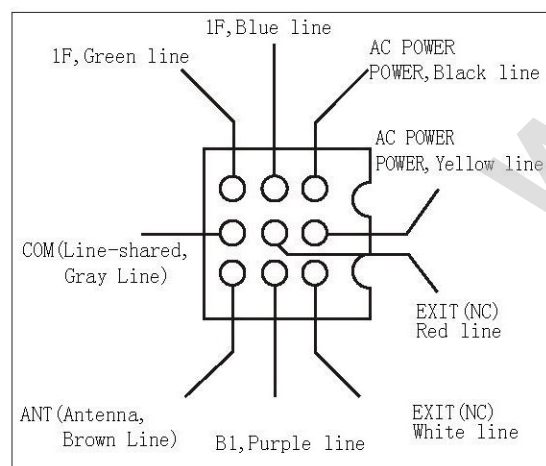

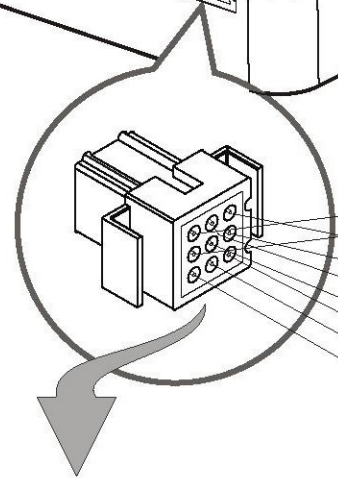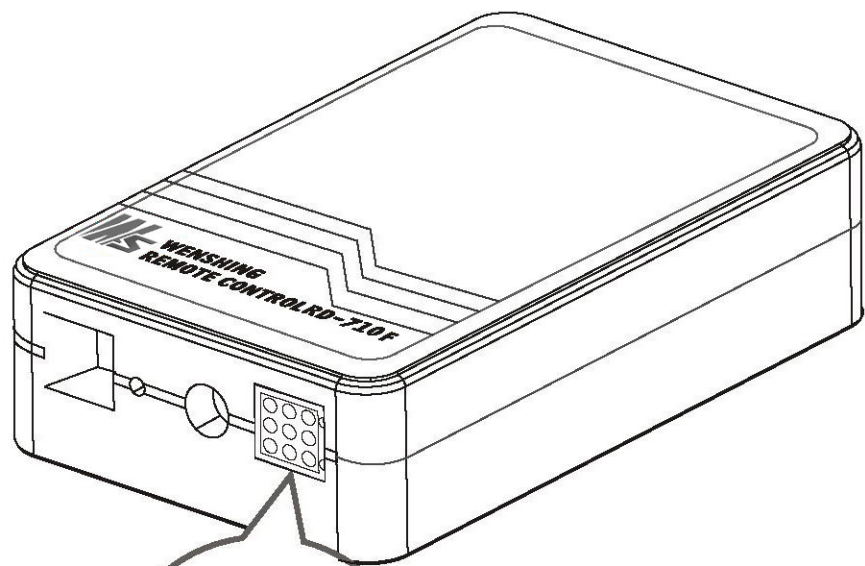

- B2, Green line
- Com(Line-shared, Gray line)
- AC Power(Black line)
- AC Power(Yellow line)
- 1F, Blue line
- EXIT(NO), Red line combine
- EXIT(NO), White line combine
- B1(Purple line)
- ANT(Antenna, Brown line)

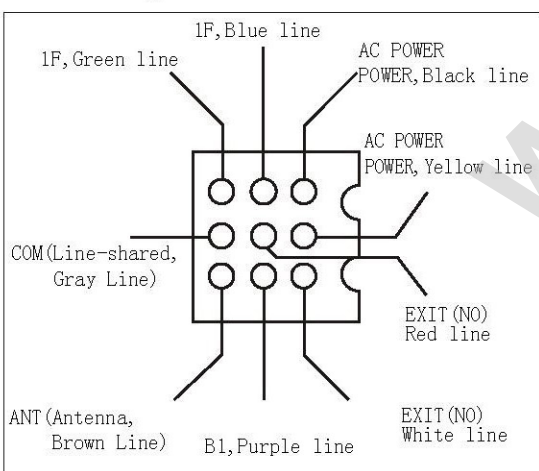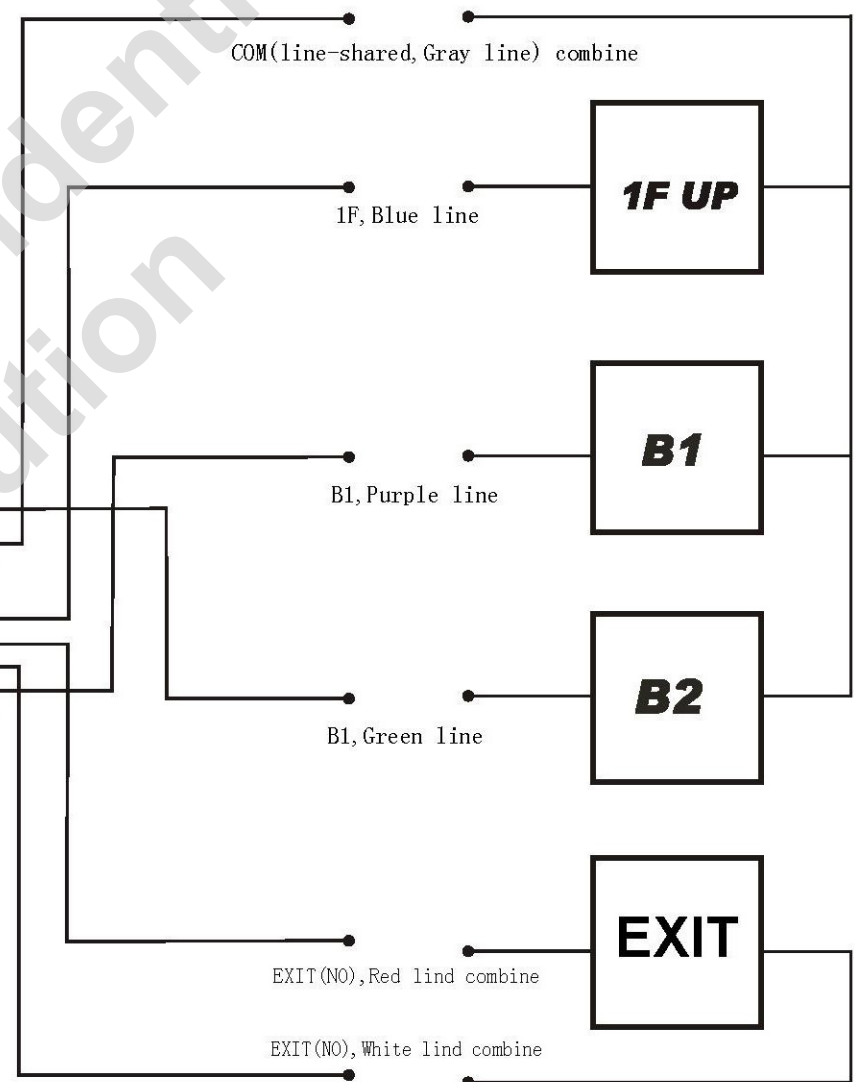

RD-710F 控制模式對照表

遙控器型號	指撥開關撥碼模式 	繼電器模式
TX-FM04(B1B2)	4 ON	鐵捲門模式
	2,4 ON	升降機模式
	1,4 ON	自動下降模式
	1,2,3 ON	單點控制
TX-FM04 (OPEN,STOP)	4 ON	鐵捲門模式
	2,4 ON	升降機模式
	1,4 ON	自動下降模式
	1,2,3 ON	單點控制

RD-710F安裝步驟:

1. 打開包裝盒後，請檢視配件是否齊全（主機*1、遙控器*2、固定架*1、線材*1）。
2. 將馬達電源切斷，以免發生危險。
3. 依照圖示將線材安裝於馬達配線盤。
4. 將主機固定後，接上線材。
5. 馬達電壓有分110V及220V，先檢視馬達電壓是幾伏特，再將本主機之電壓開關撥至相同之電壓。
6. 將馬達電源打開，通電後測試功能如皆正常，安裝程序即告完成。
7. 通電後如仍有問題，請檢視配線是否正確、電壓是否已切換一致、密碼有無撥至相同。
8. 安裝如仍有問題，請與經銷商聯繫。

* 特別注意，需將本主機之電壓開關撥至與馬達相同之電壓，才可以通電；電壓如不同，本主機內部的變壓器即會燒壞。

RD-710F Control Mode List

Remote Controller Model No.	Dip Switch Dial Code 	Relay Mode
TX-FM04(B1B2)	4 ON	Roll-up door mode
	2,4 ON	Lift Mode
	1,4 ON	Automatically decrease mode
	1,2,3 ON	Single point control
TX-FM04 (OPEN,STOP)	4 ON	Roll-up door mode
	2,4 ON	Lift Mode
	1,4 ON	Automatically decrease mode
	1,2,3 ON	Single point control

RD-710F Step:

1. After you open box, please check whole accessories are complete. (Host*1pcs, Remote controller *2pcs, Fix stand*1pcs, wire*1pcs)
2. Please check motor power supply to avoid danger.
3. Please put wire installed in the motor wiring plate according to the wiring drawing on manual.
4. After fix the host on the wall, please connect the wire.
5. Motor voltage has 110V and 220V, please check voltage value on motor and adjust the host power supply to the same voltage as motor power supply.
6. Open motor power supply. If power function is normal, it is meaning you finished assemble.
7. If it still has problem, please check following:
 - Wire connection is correct
 - Voltage is the same as motor
 - Dip code is the same.
8. If you still have problem on using, please contact disruptor .

* Please notice, host voltage needs to same as motor so that they just can start to work. If working based on different voltage between host and motor, host adaptor will be burned.